


Cutlass Bearing Removal HR40, HR43 & HR48

(Stern tube construction from 2007 with composite/rubber bearing)

Step 1: Remove propeller and loosen 2 x allen screws.

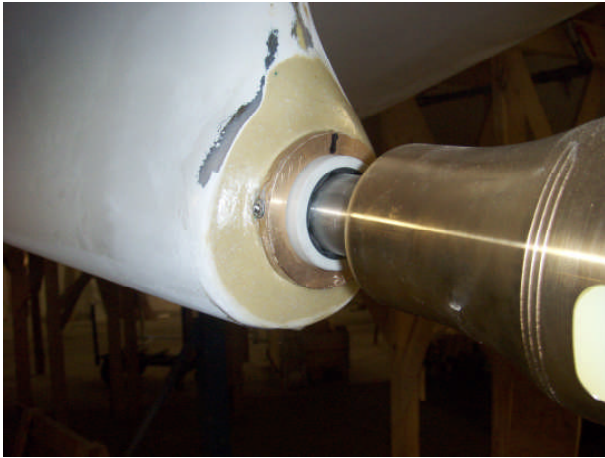

Step 2: Grip the cutlass bearing's composite outer sleeve, rotate and pull to remove.



Step 3 : Remove bearing and replace. Pls. note: do not allow propeller shaft to hang in stern tube; risk of damage to gearbox shaft!

