Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

HR 37

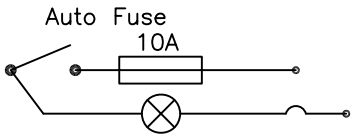

Auto Fuse



Battery

Circuit breaker

Steam Light

Port Nav Light

Alternator

Starboard Nav Light

Start Motor

Aft Nav. Light



230V Auto Fuse

3-Colour Light

Anchor Light

230V Outlet

Deck Light

Earth

Compass Light

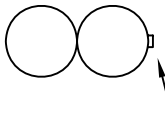

Connection Box

Light with Switch (Wardrobe etc.)

Light with Switch (Lamp)

Light (Ceiling)

Switch

Light (Meta List)

Low Current Outlet (12V or 24V)

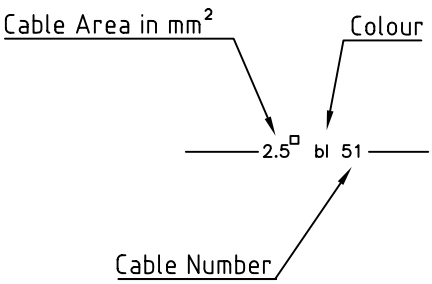

Colours:

w = white
b = black
r = red
gr = grey
gn = green
y = yellow
vi = violett
or = orange
bl = blue
bn = brown
tr = transparent
ppl = purple

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram
HR 37

Power supply standard & with up to 6HP bow thruster

1A

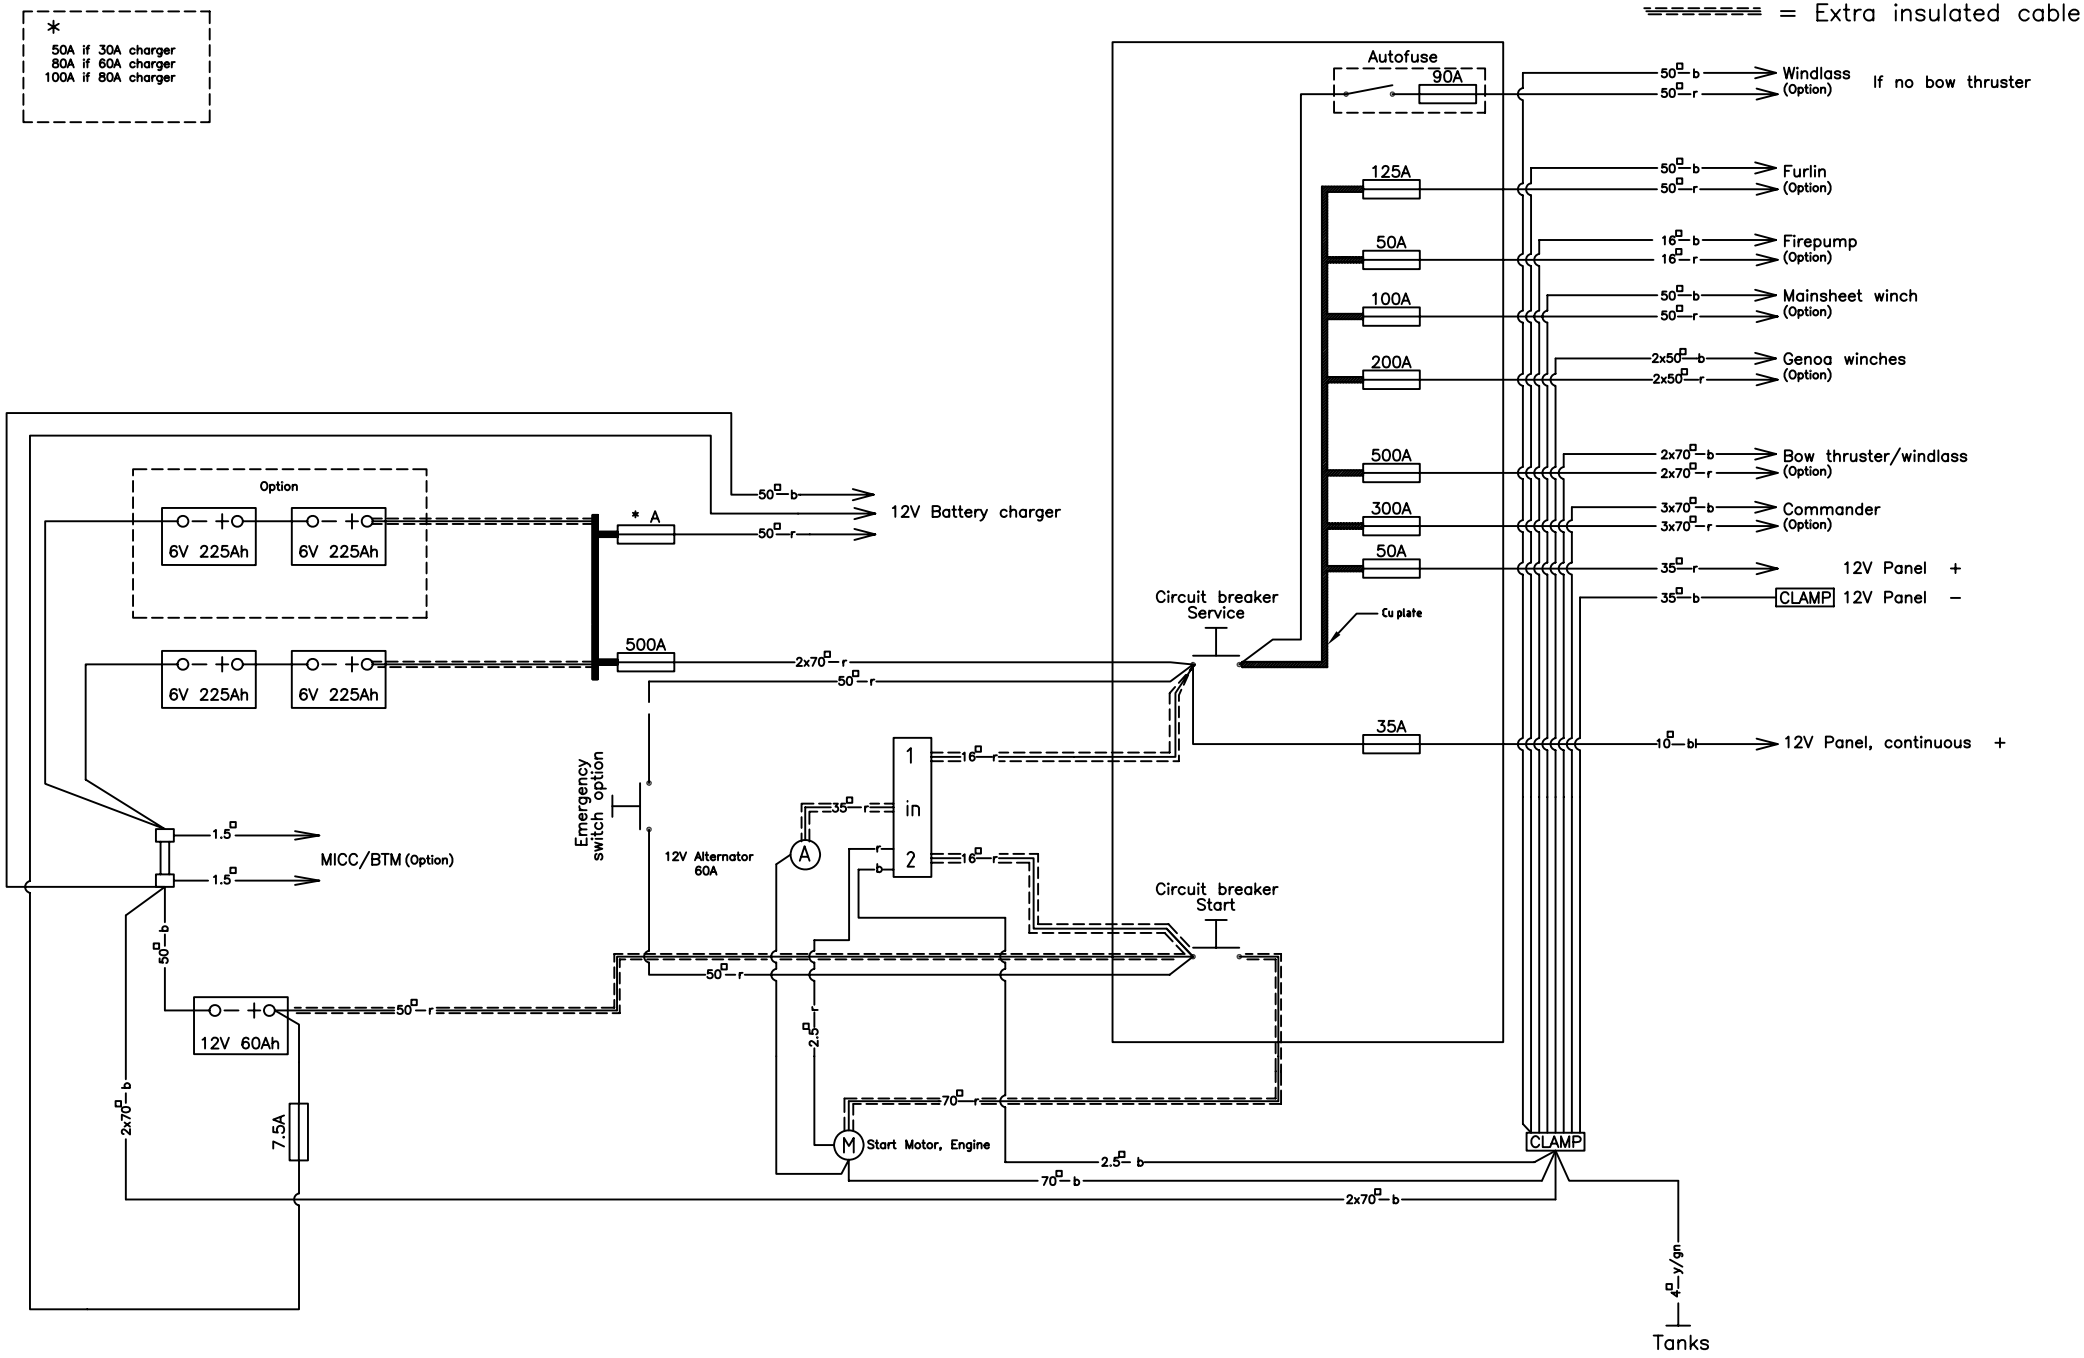

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram
HR 37

Power supply with dual alternators
Up to 6HP bow thruster

1B

= Extra insulated cable

*
50A if 30A charger
80A if 60A charger
100A if 80A charger

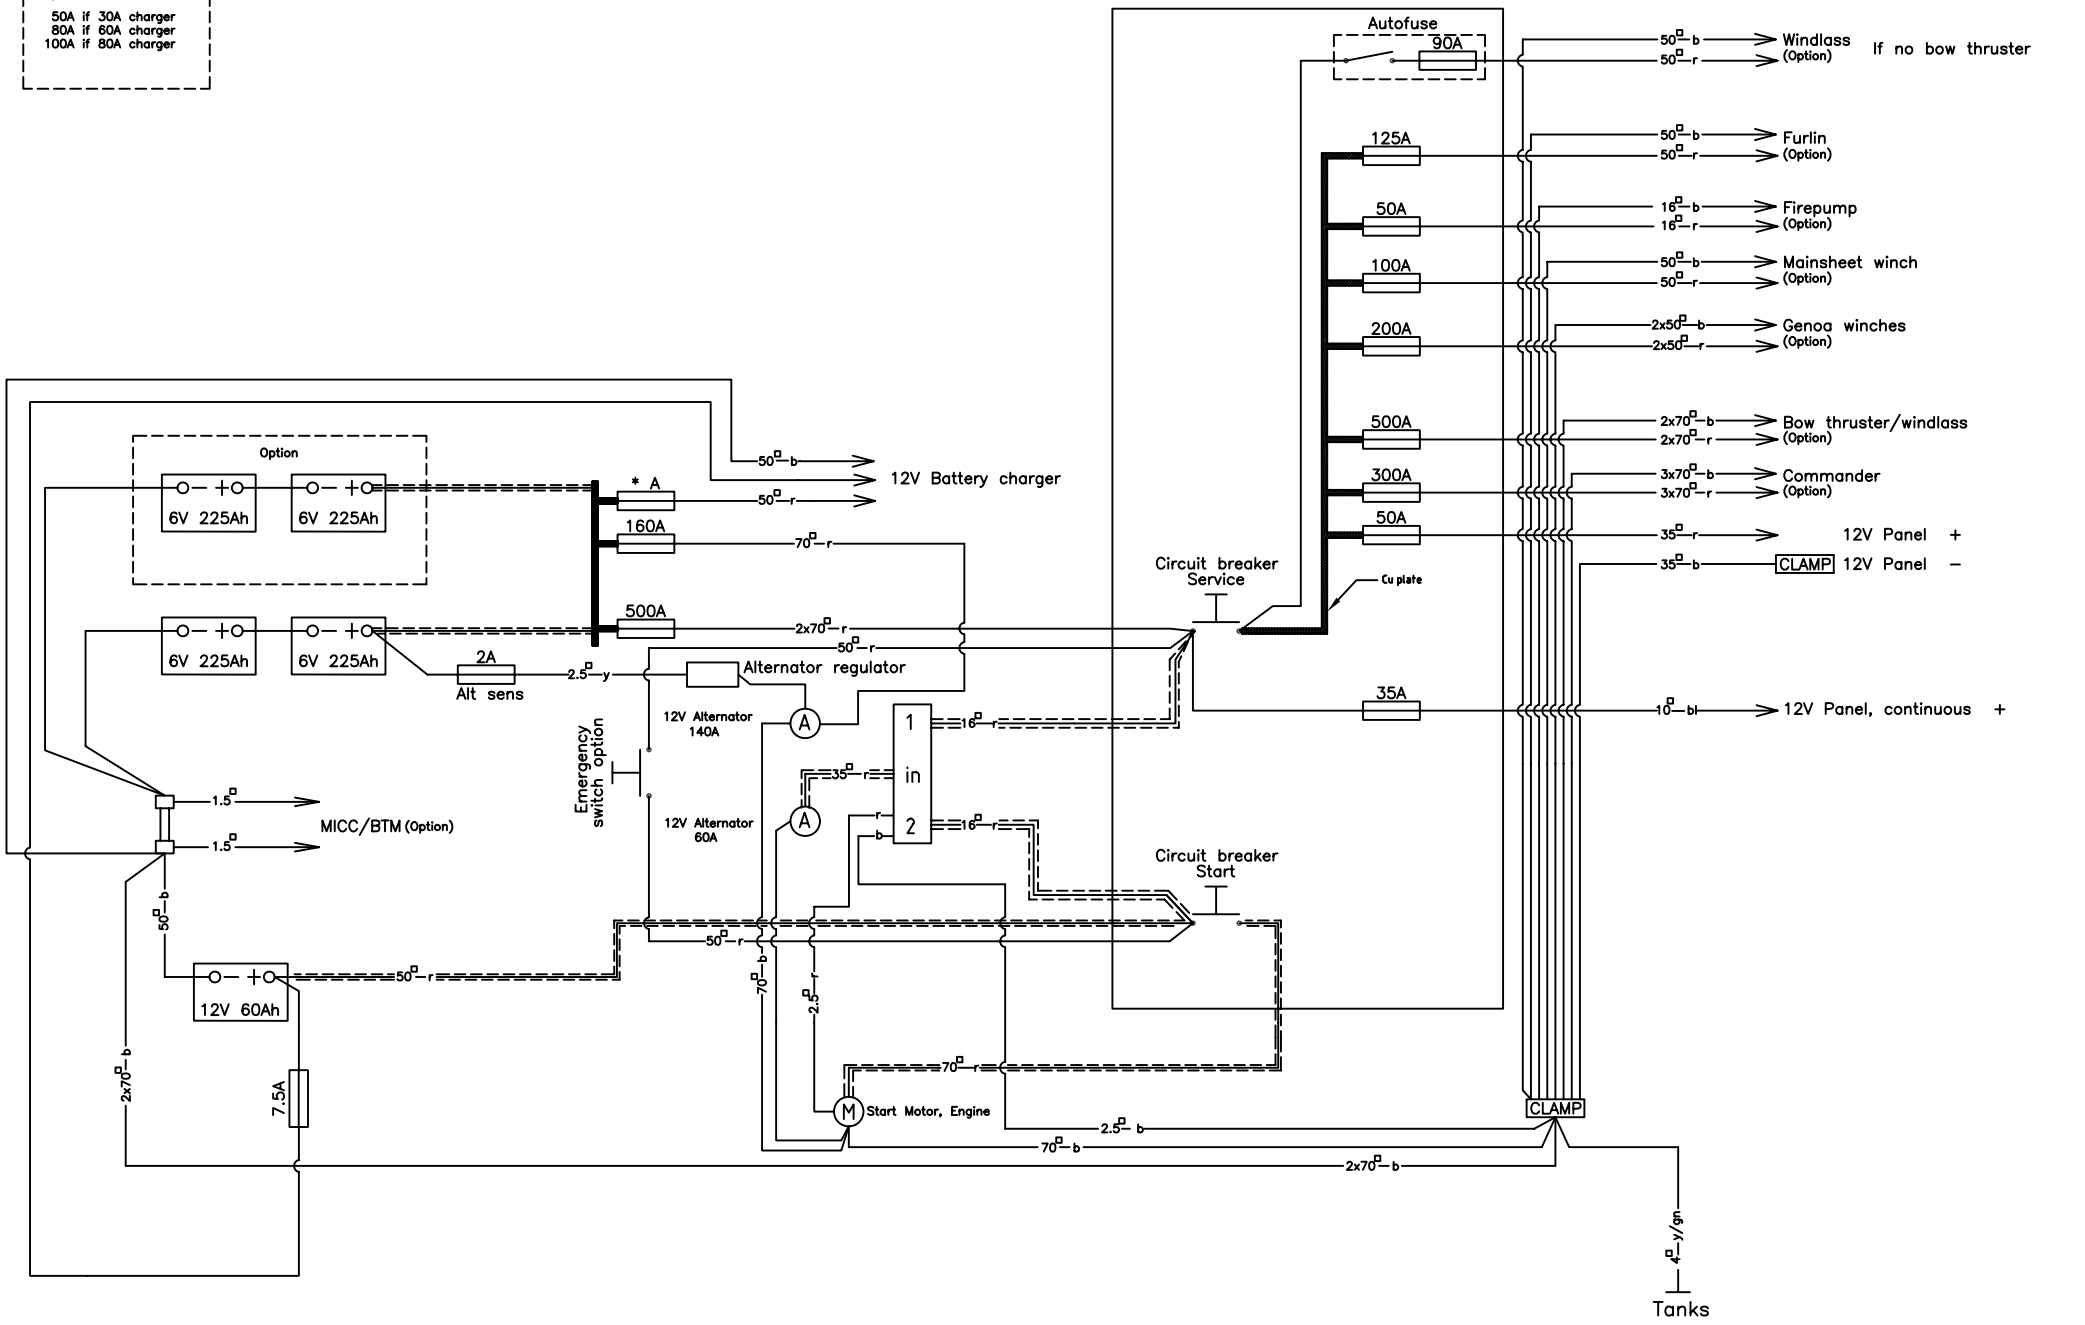

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram
HR 37

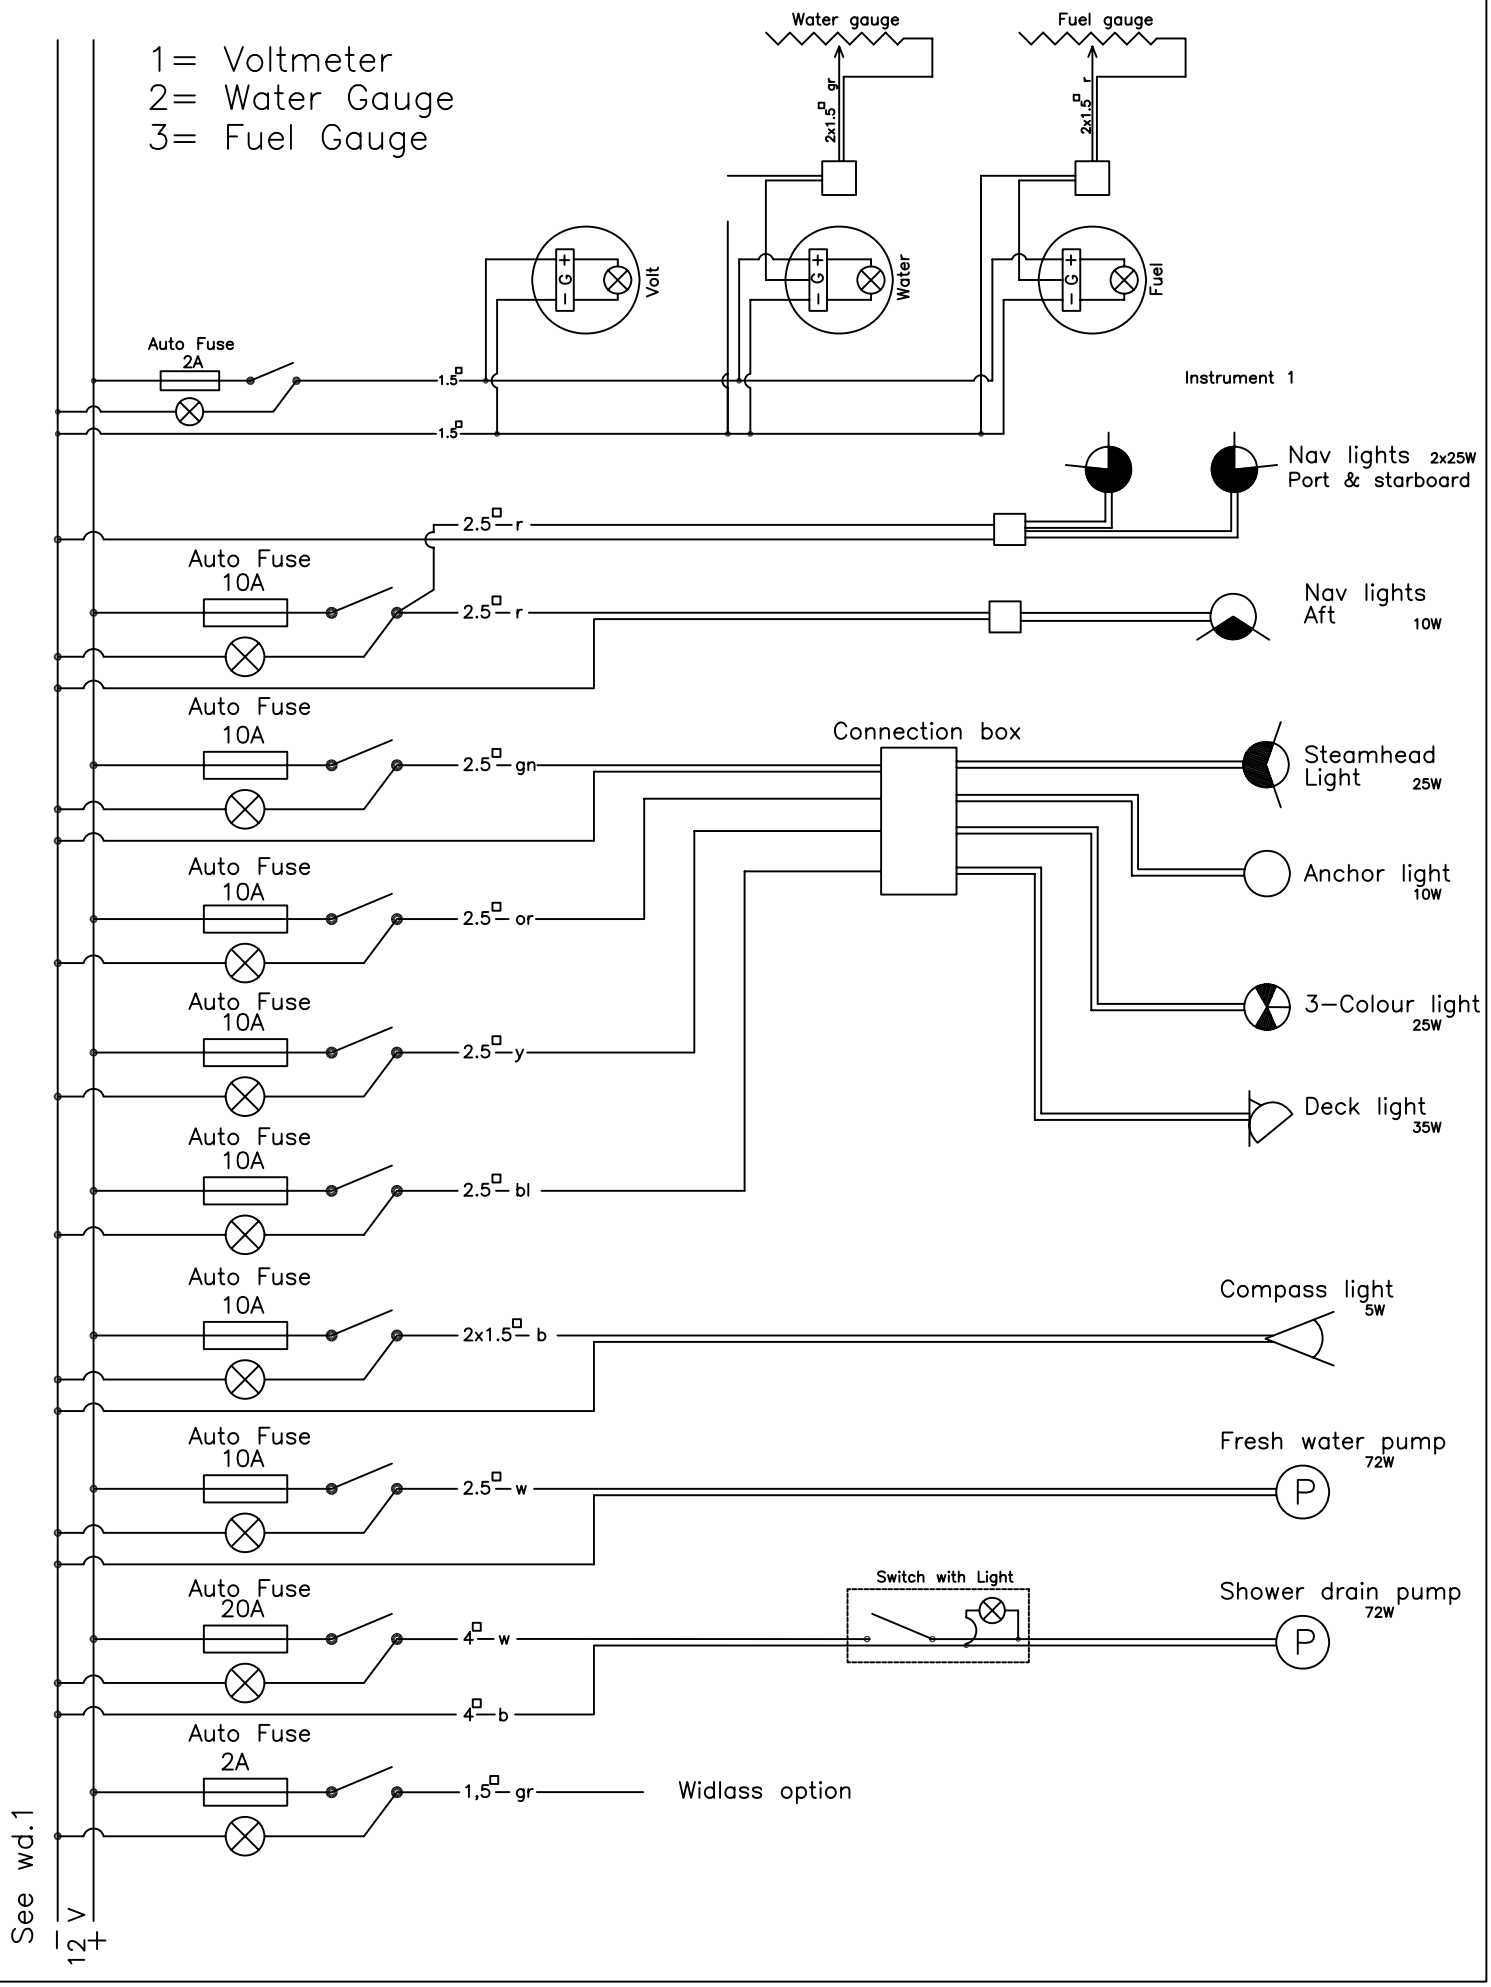

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram
HR 37

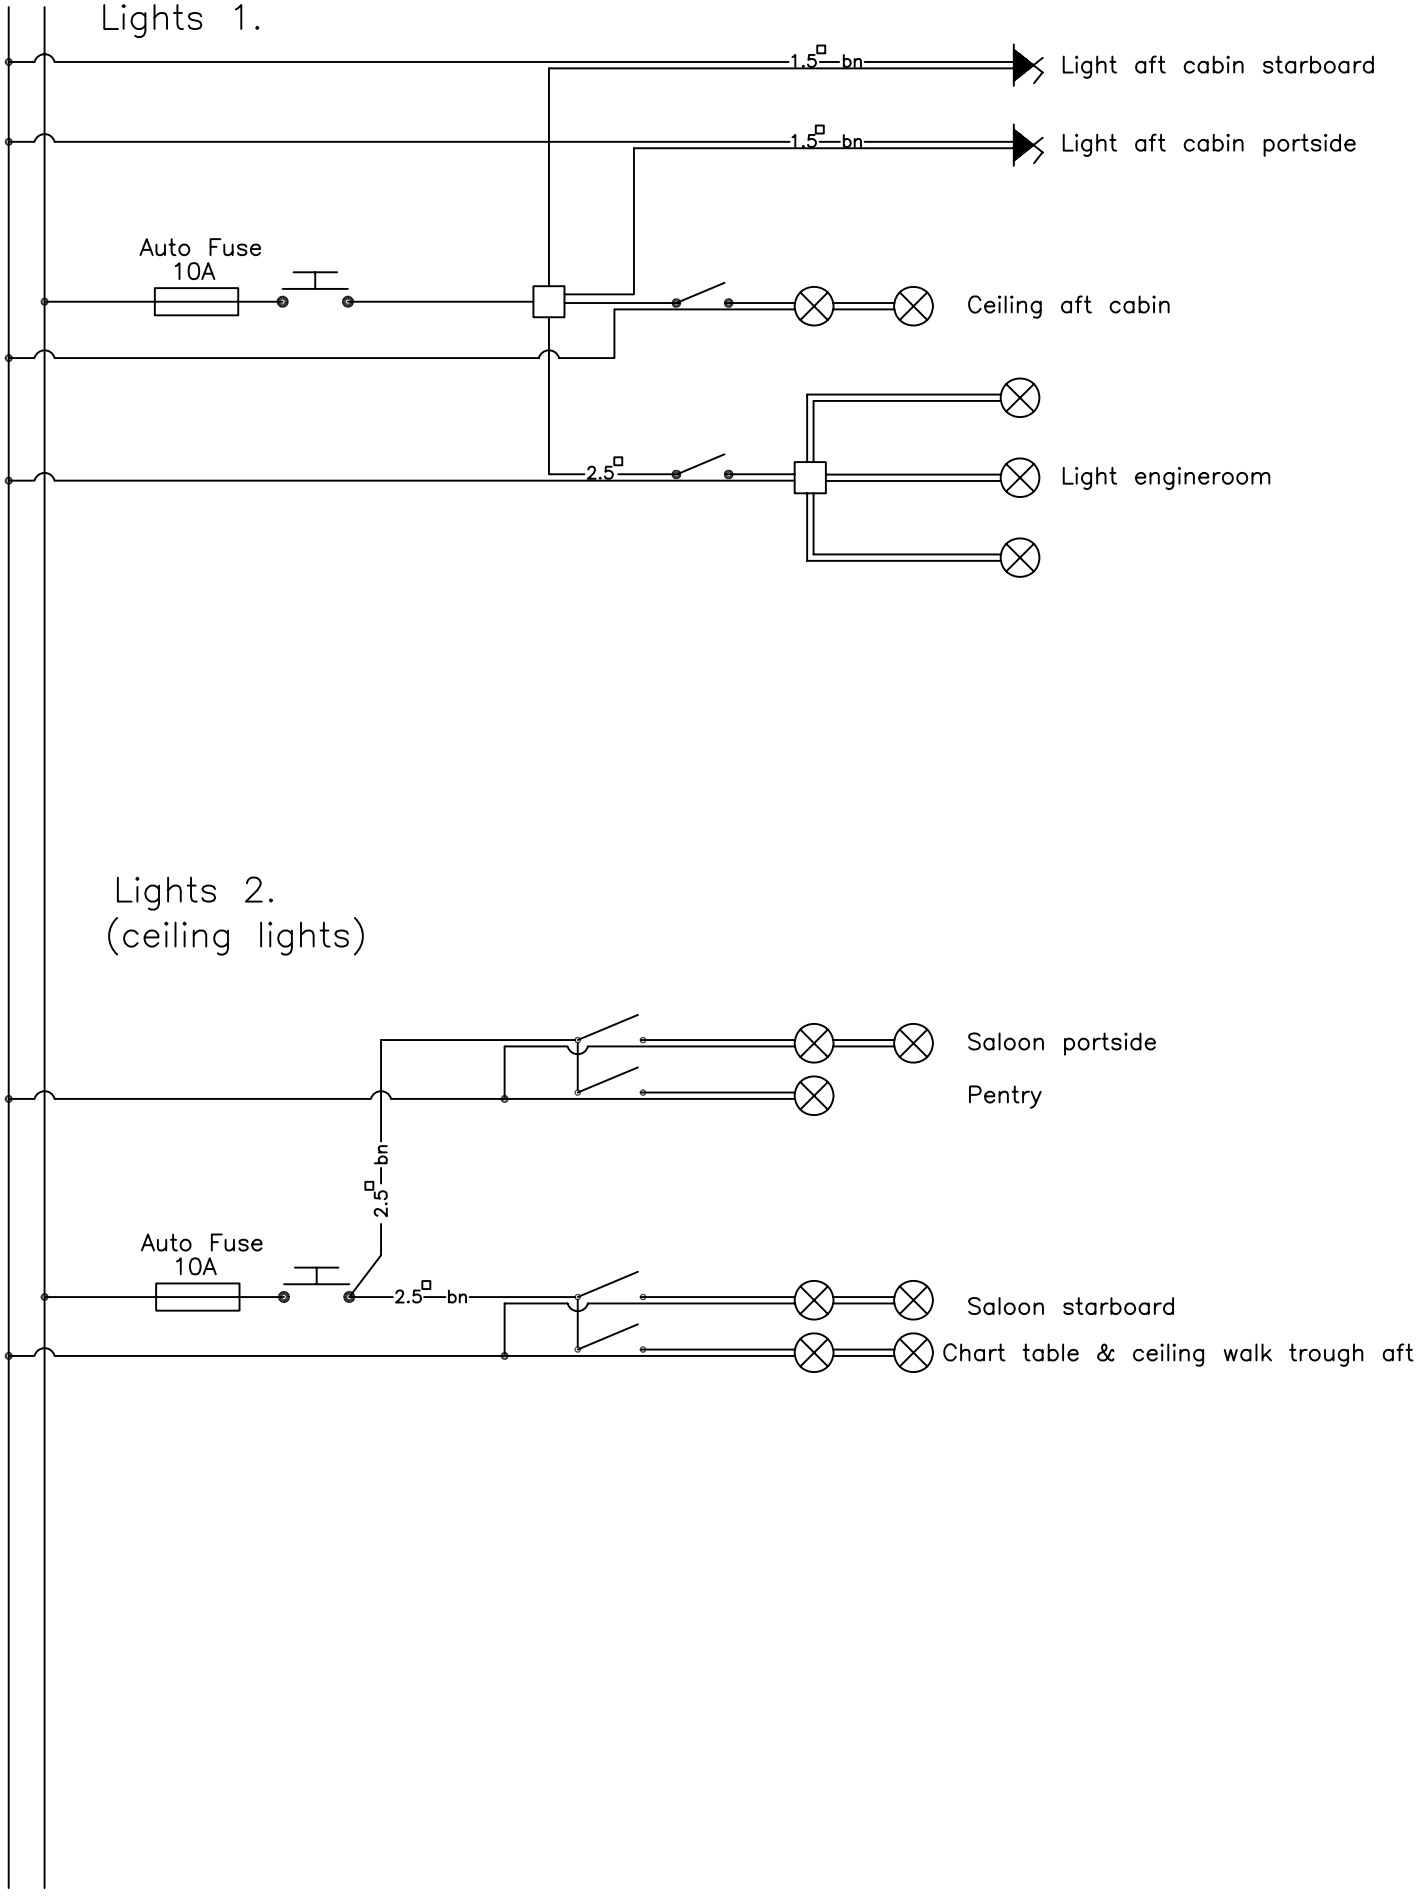

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram
HR 37

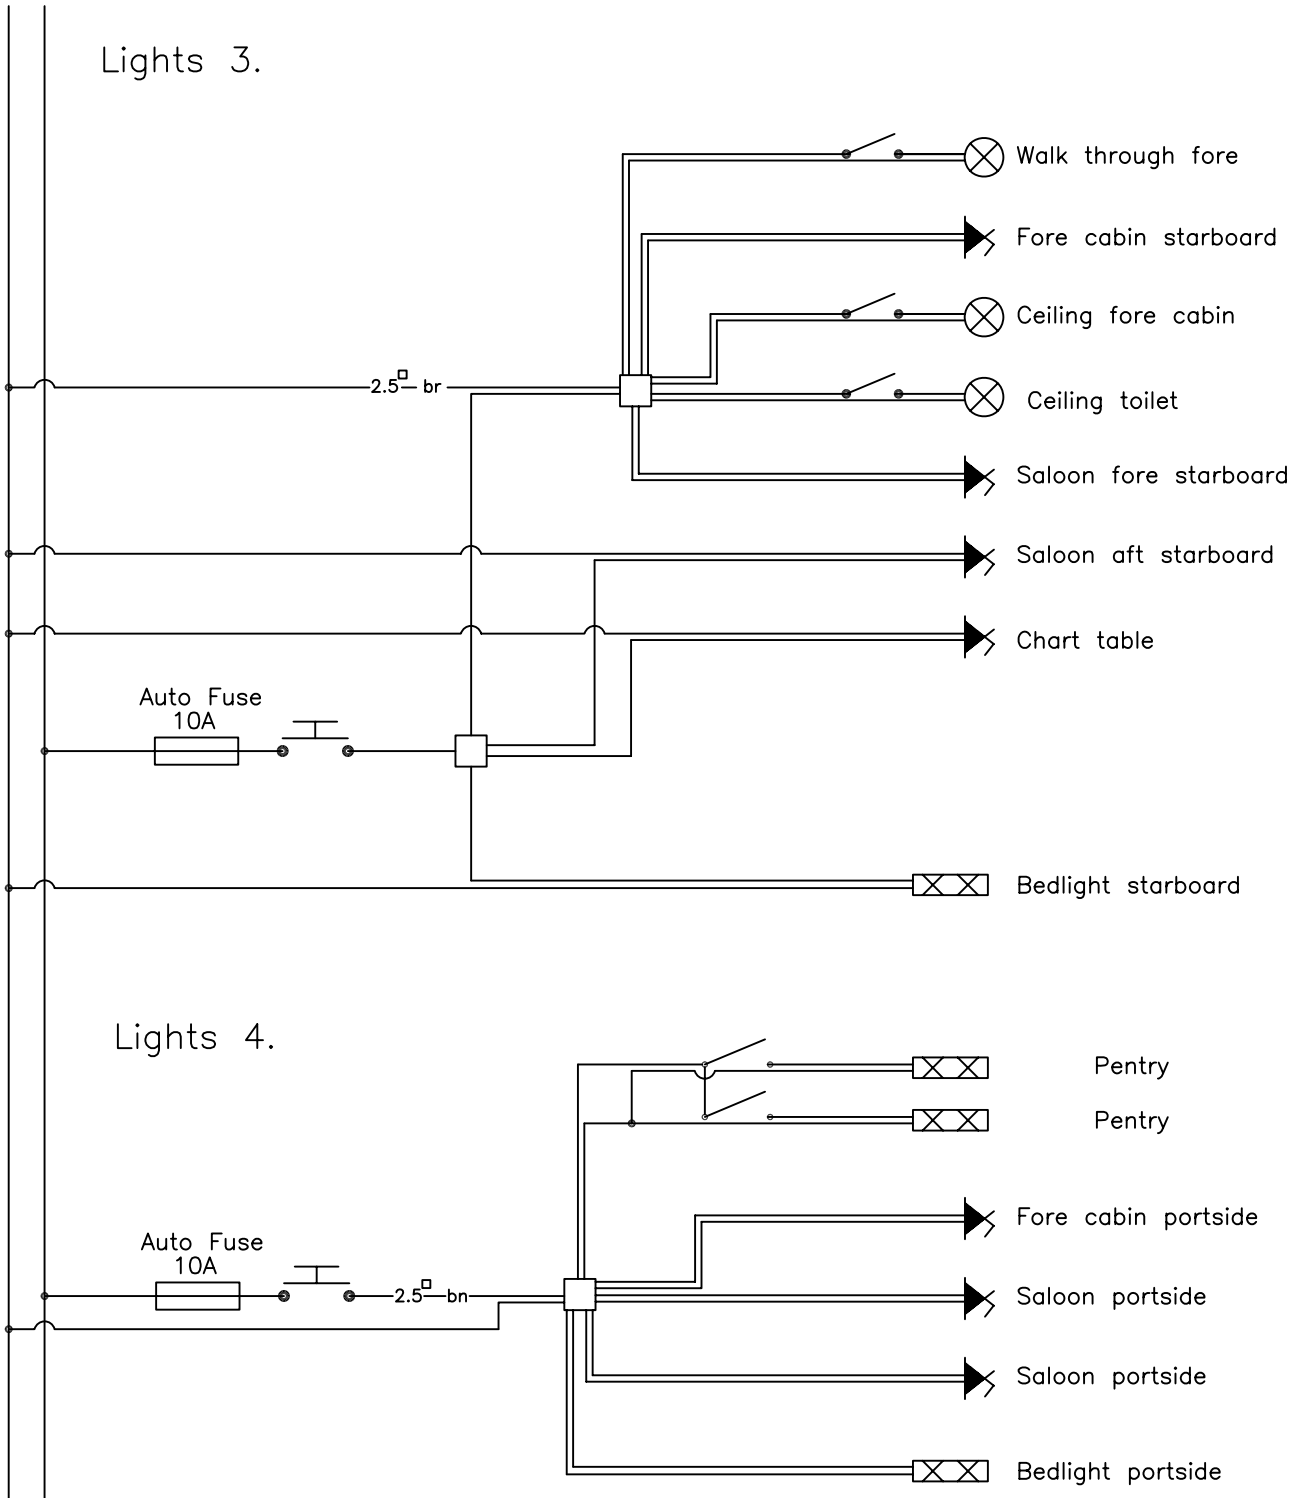

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram
HR 37

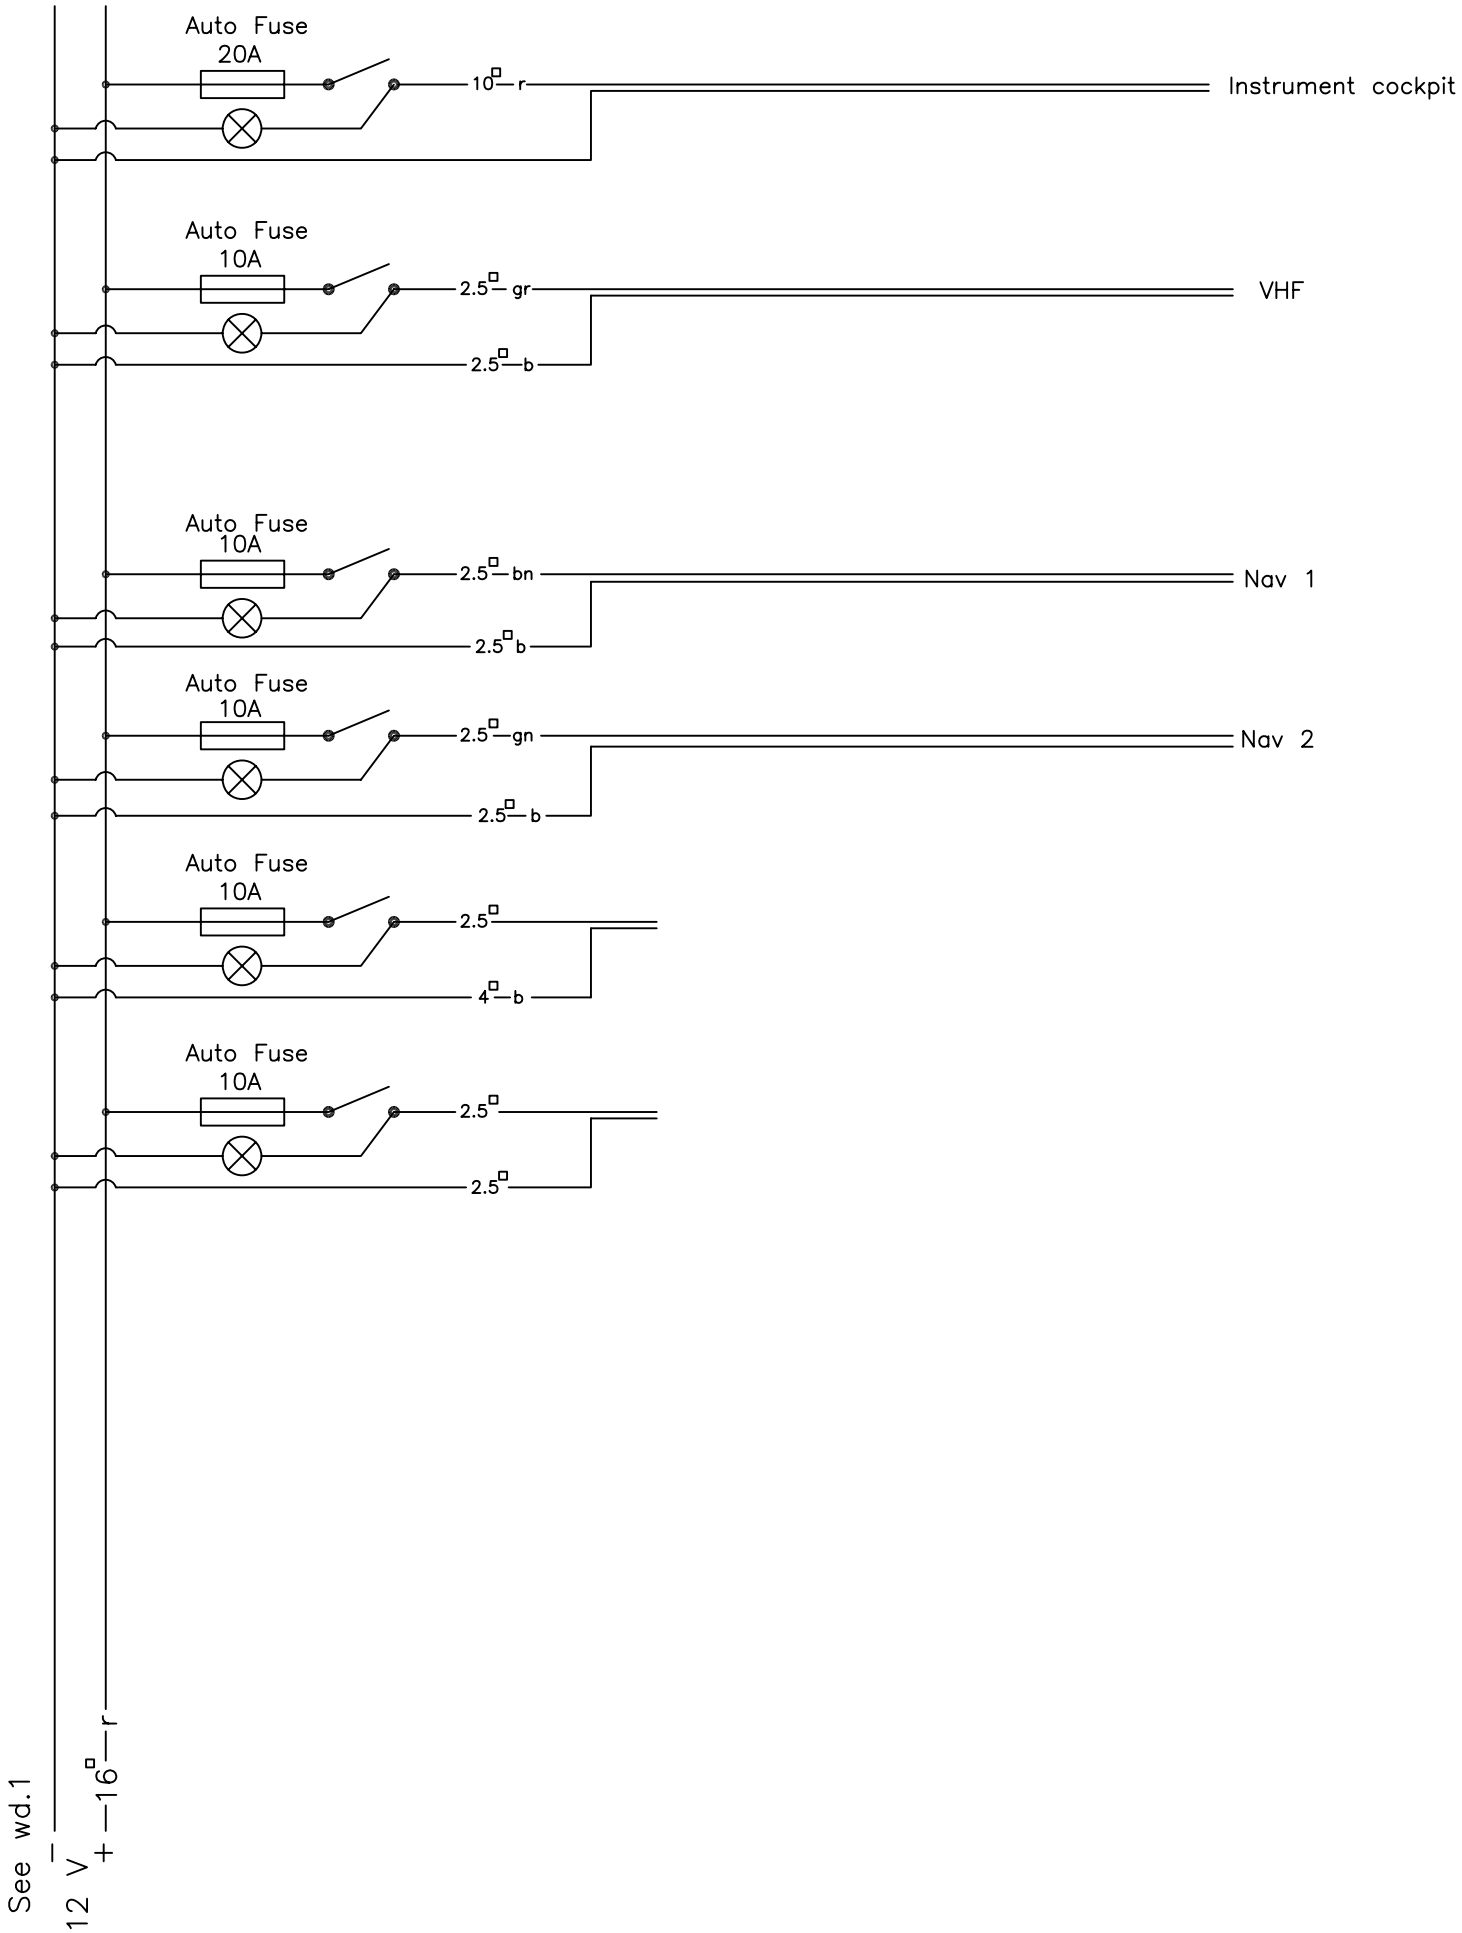

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram
HR 37

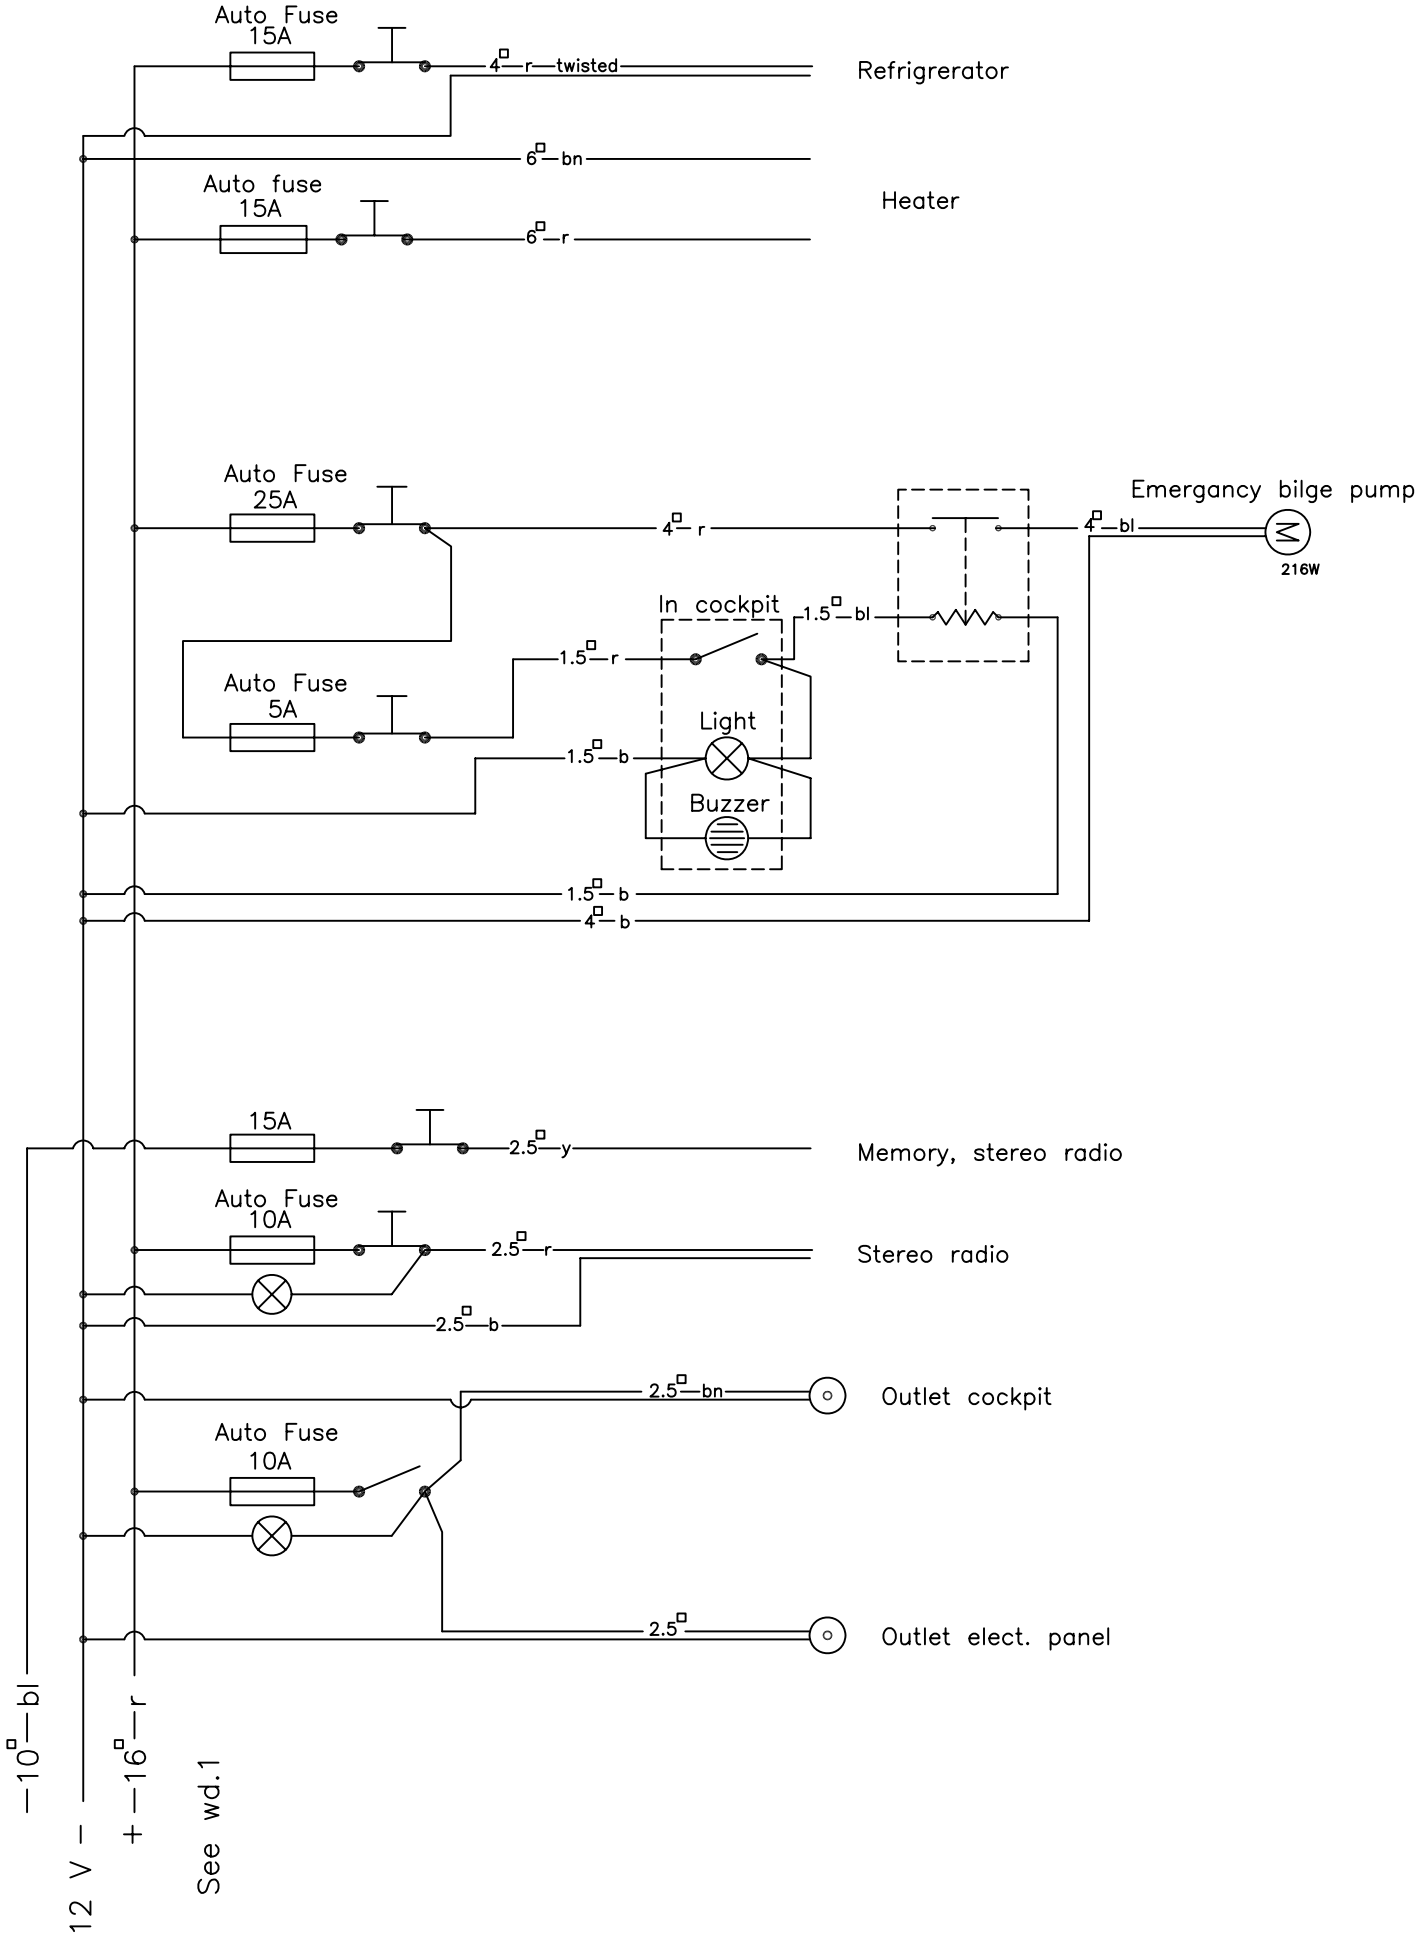

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

HR 37

Bow thruster
(Option)

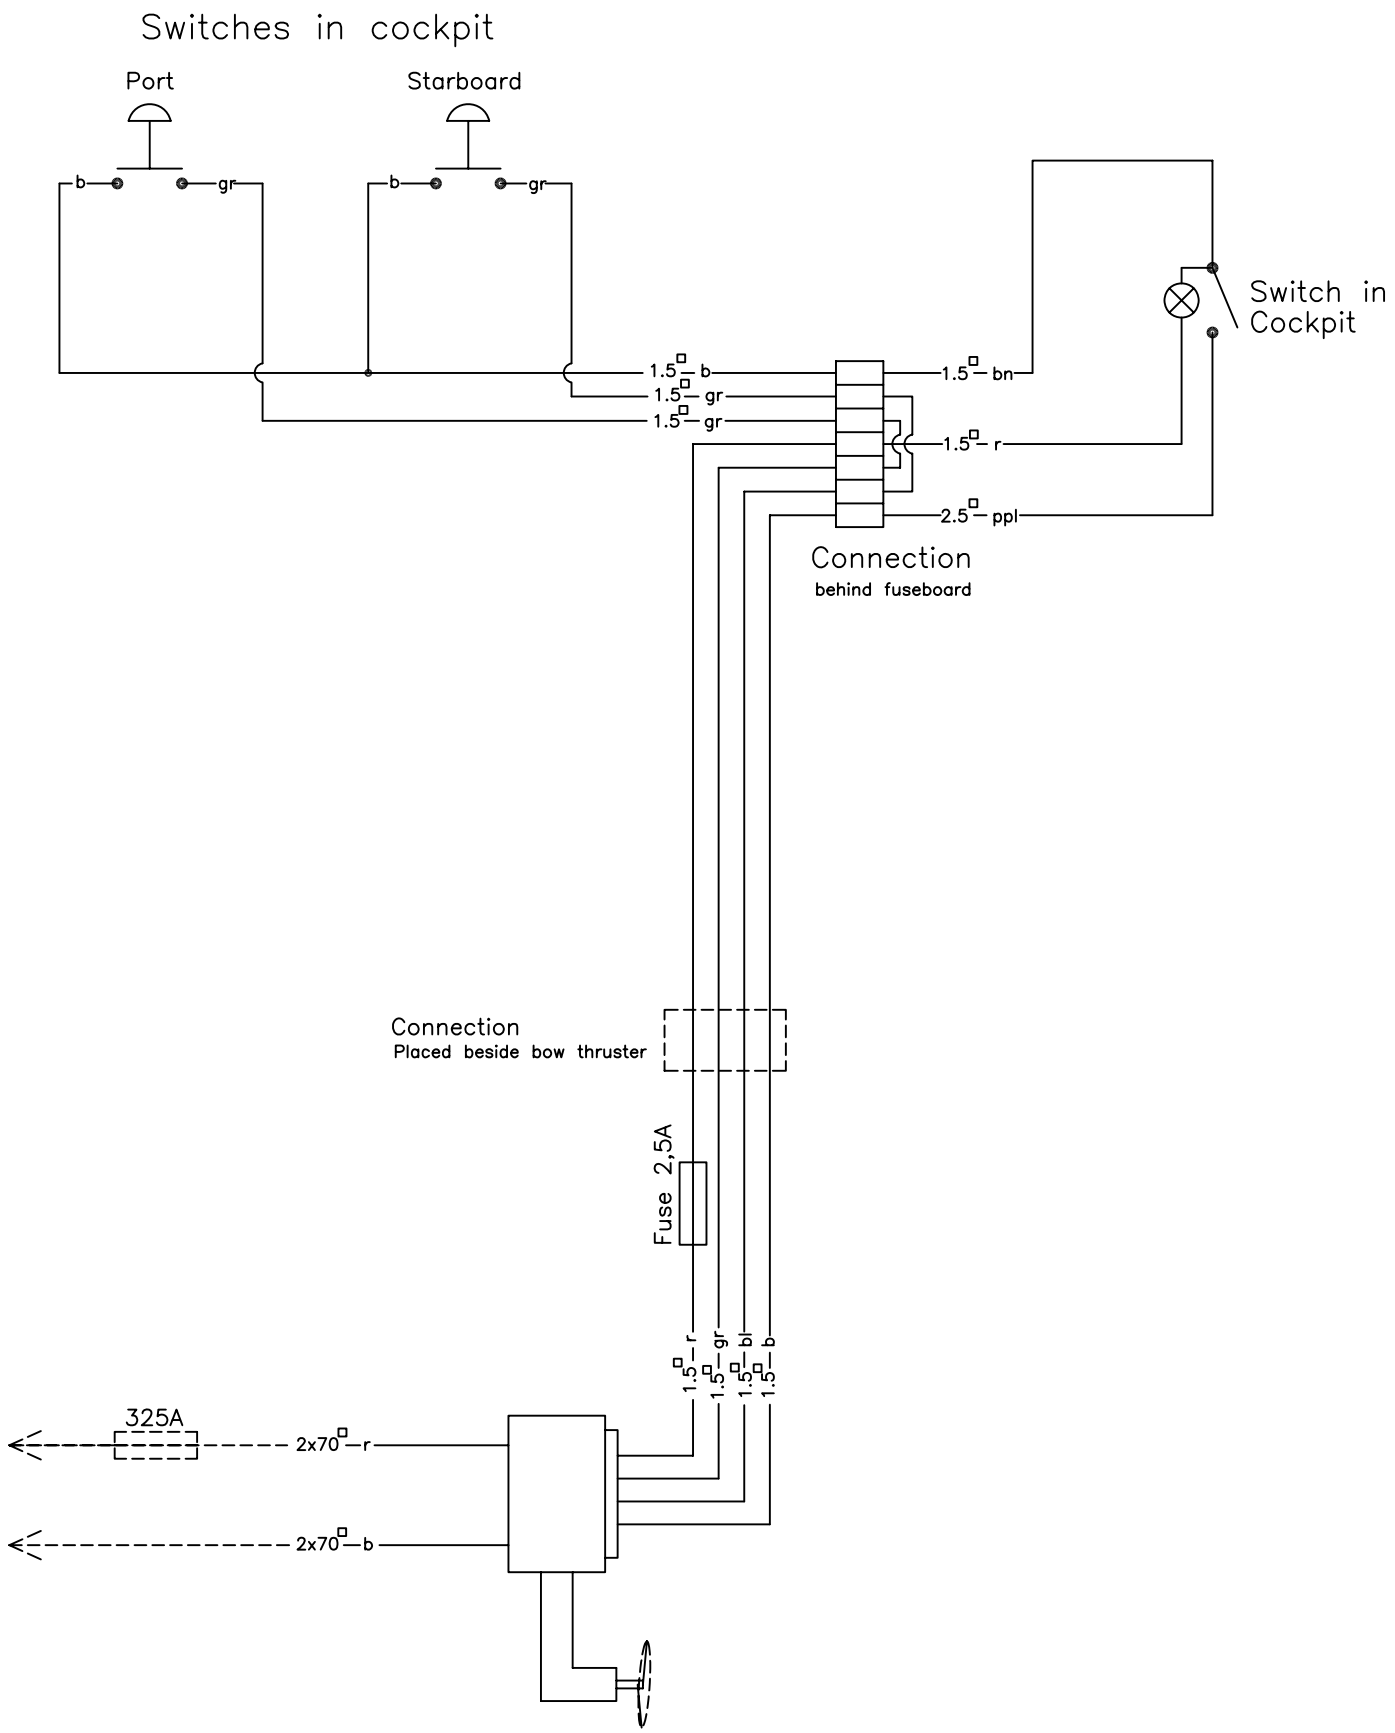

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

HR 37

Windlass

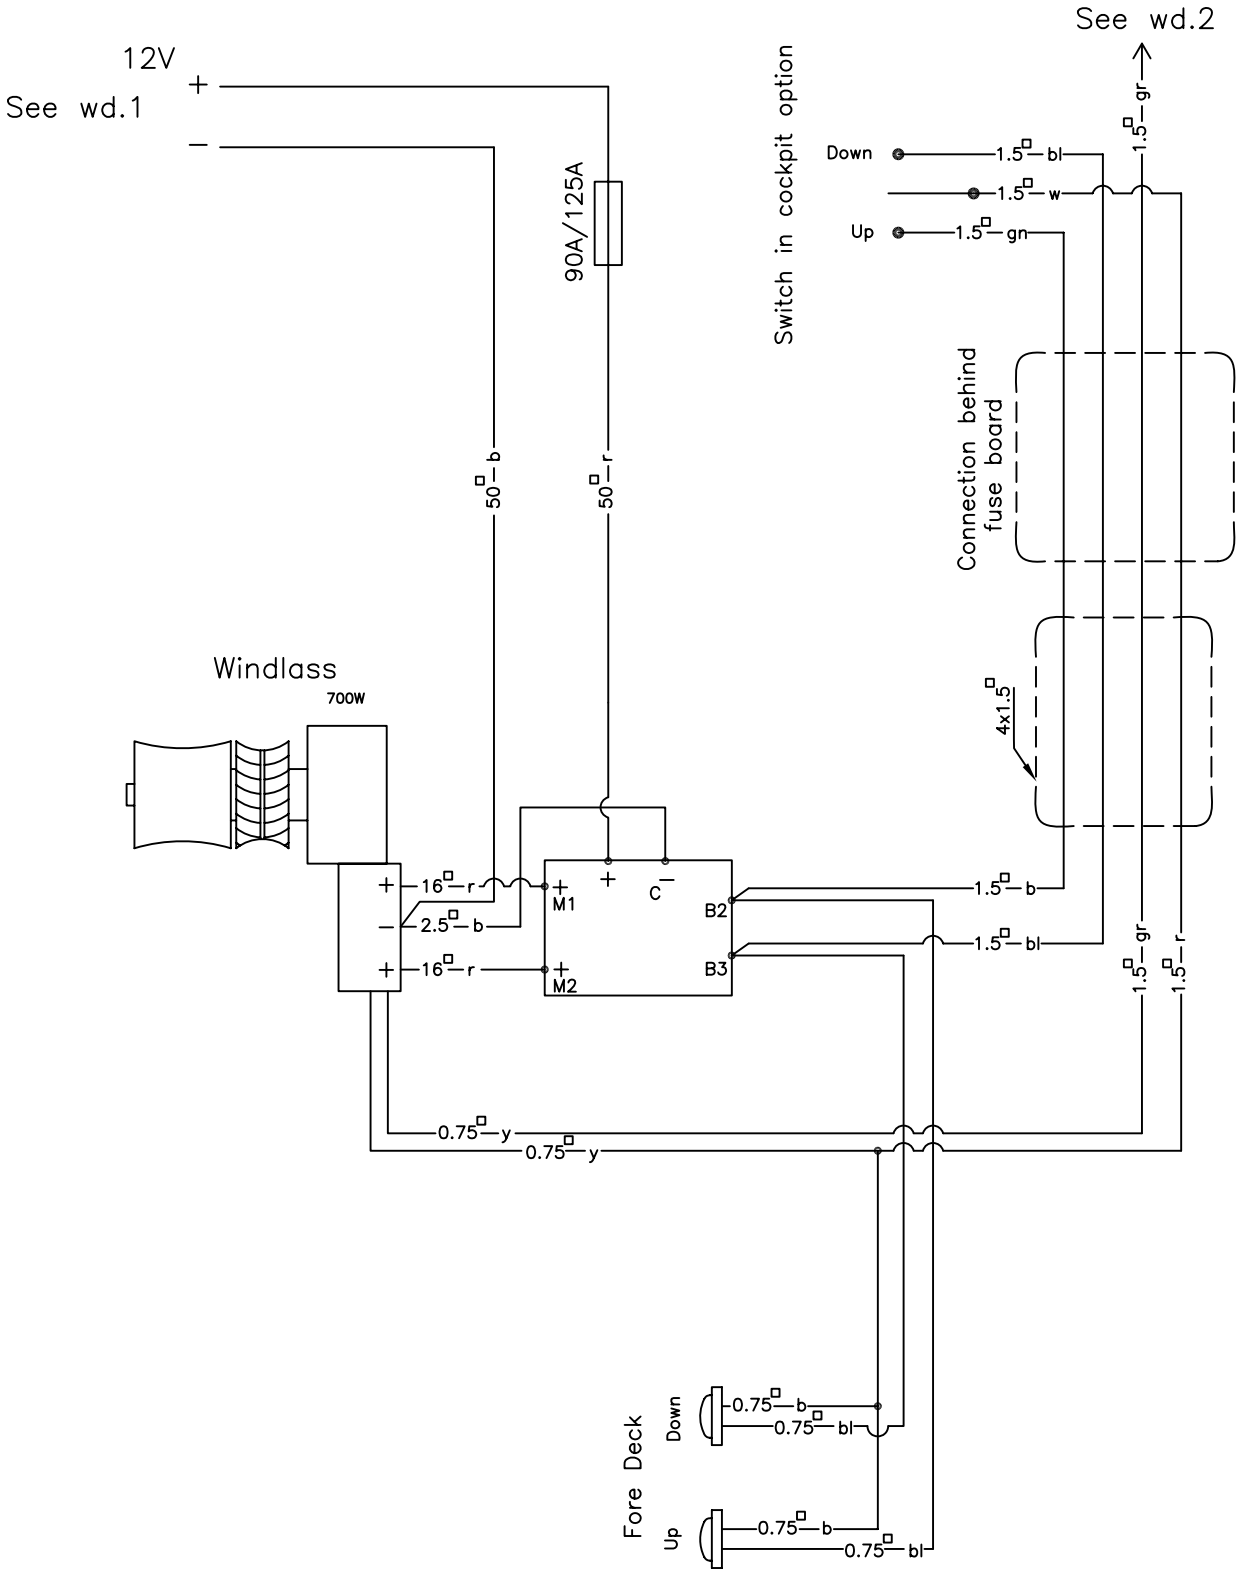

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

HR 37

Winches

(Option)

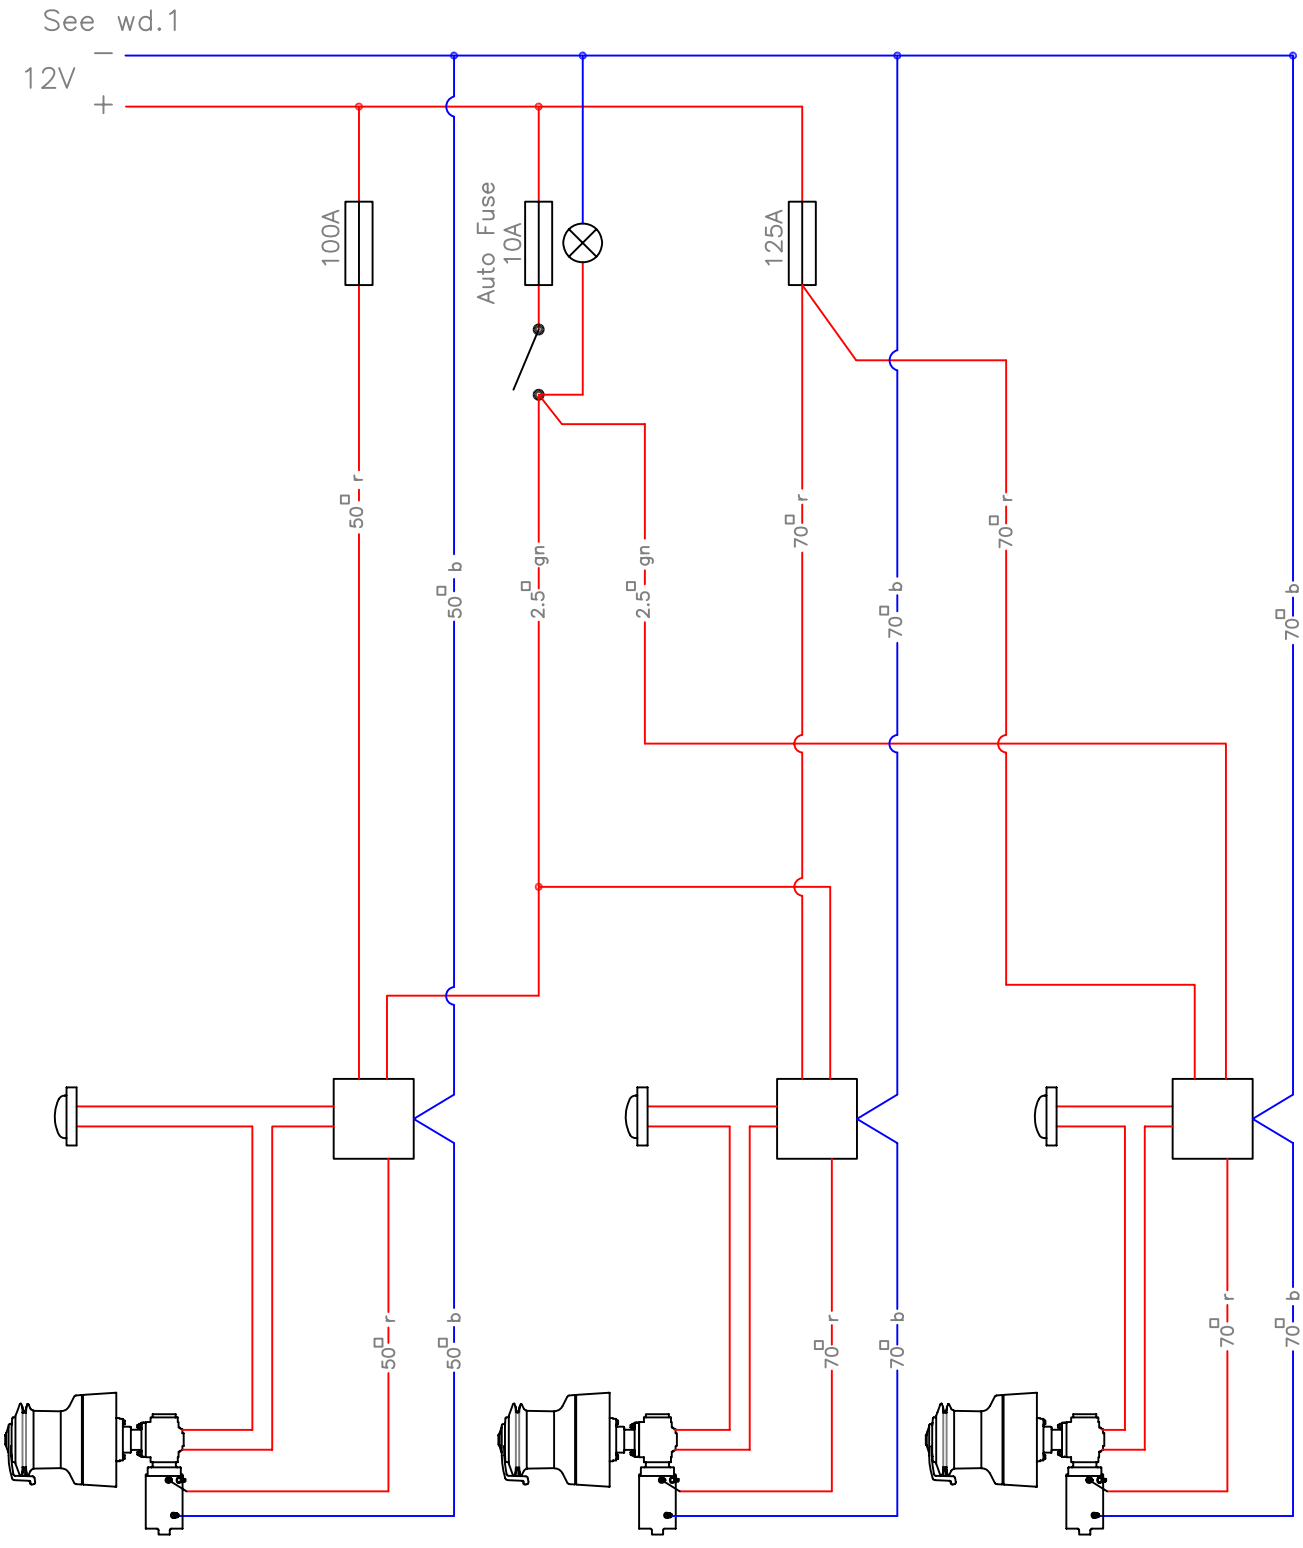

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram HR 37

230V System

(Option)

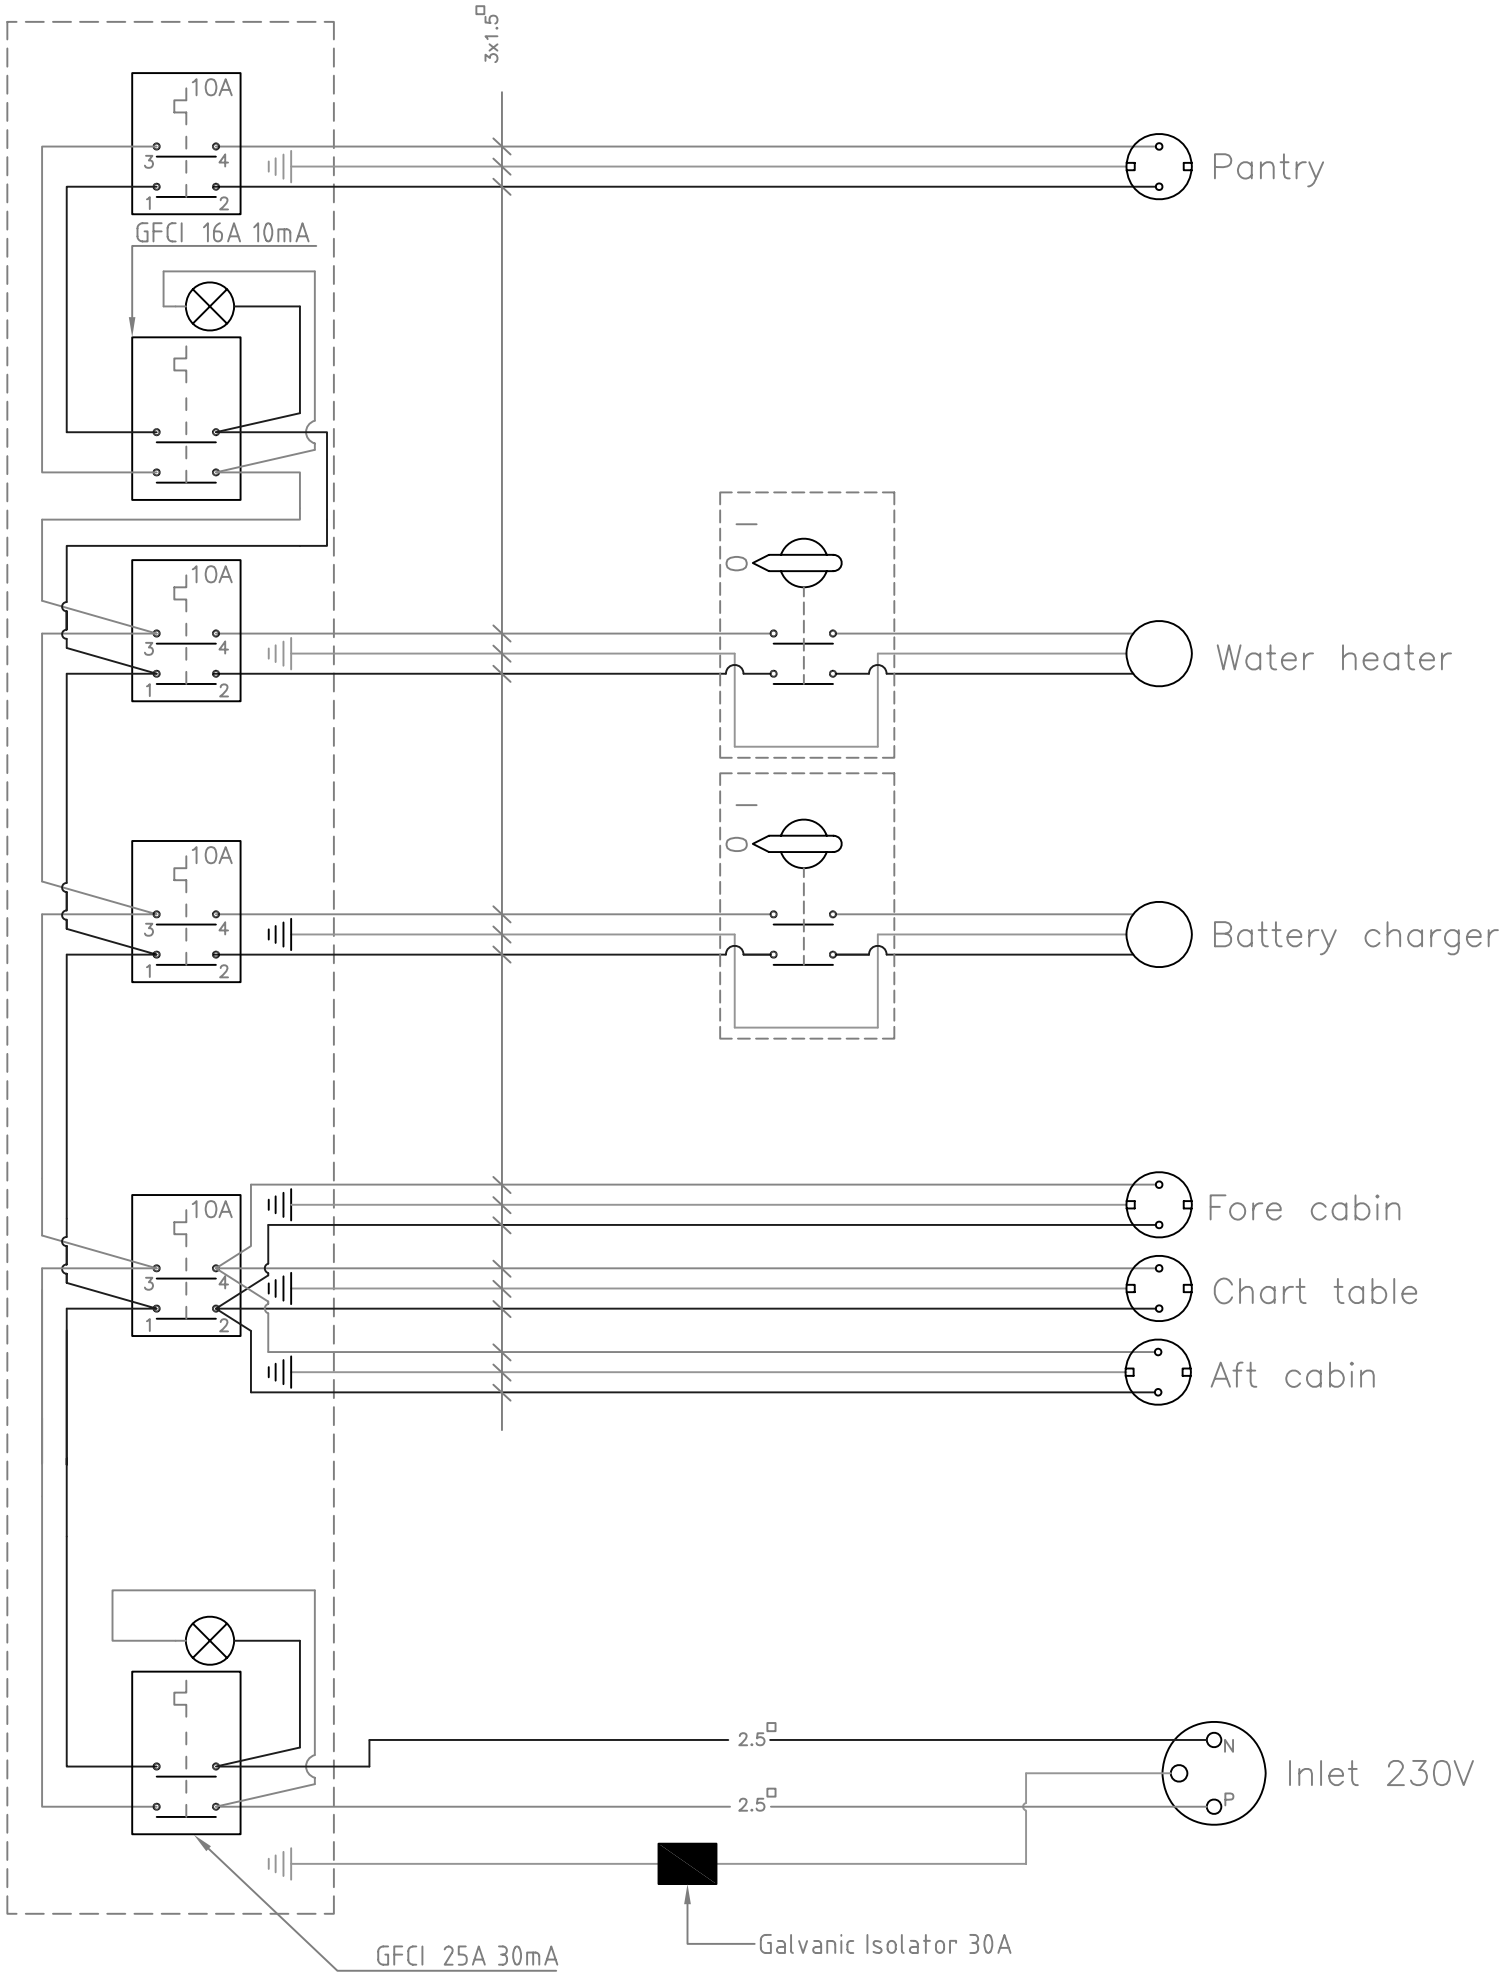

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

HR 37

230V System
With generator
(Option)

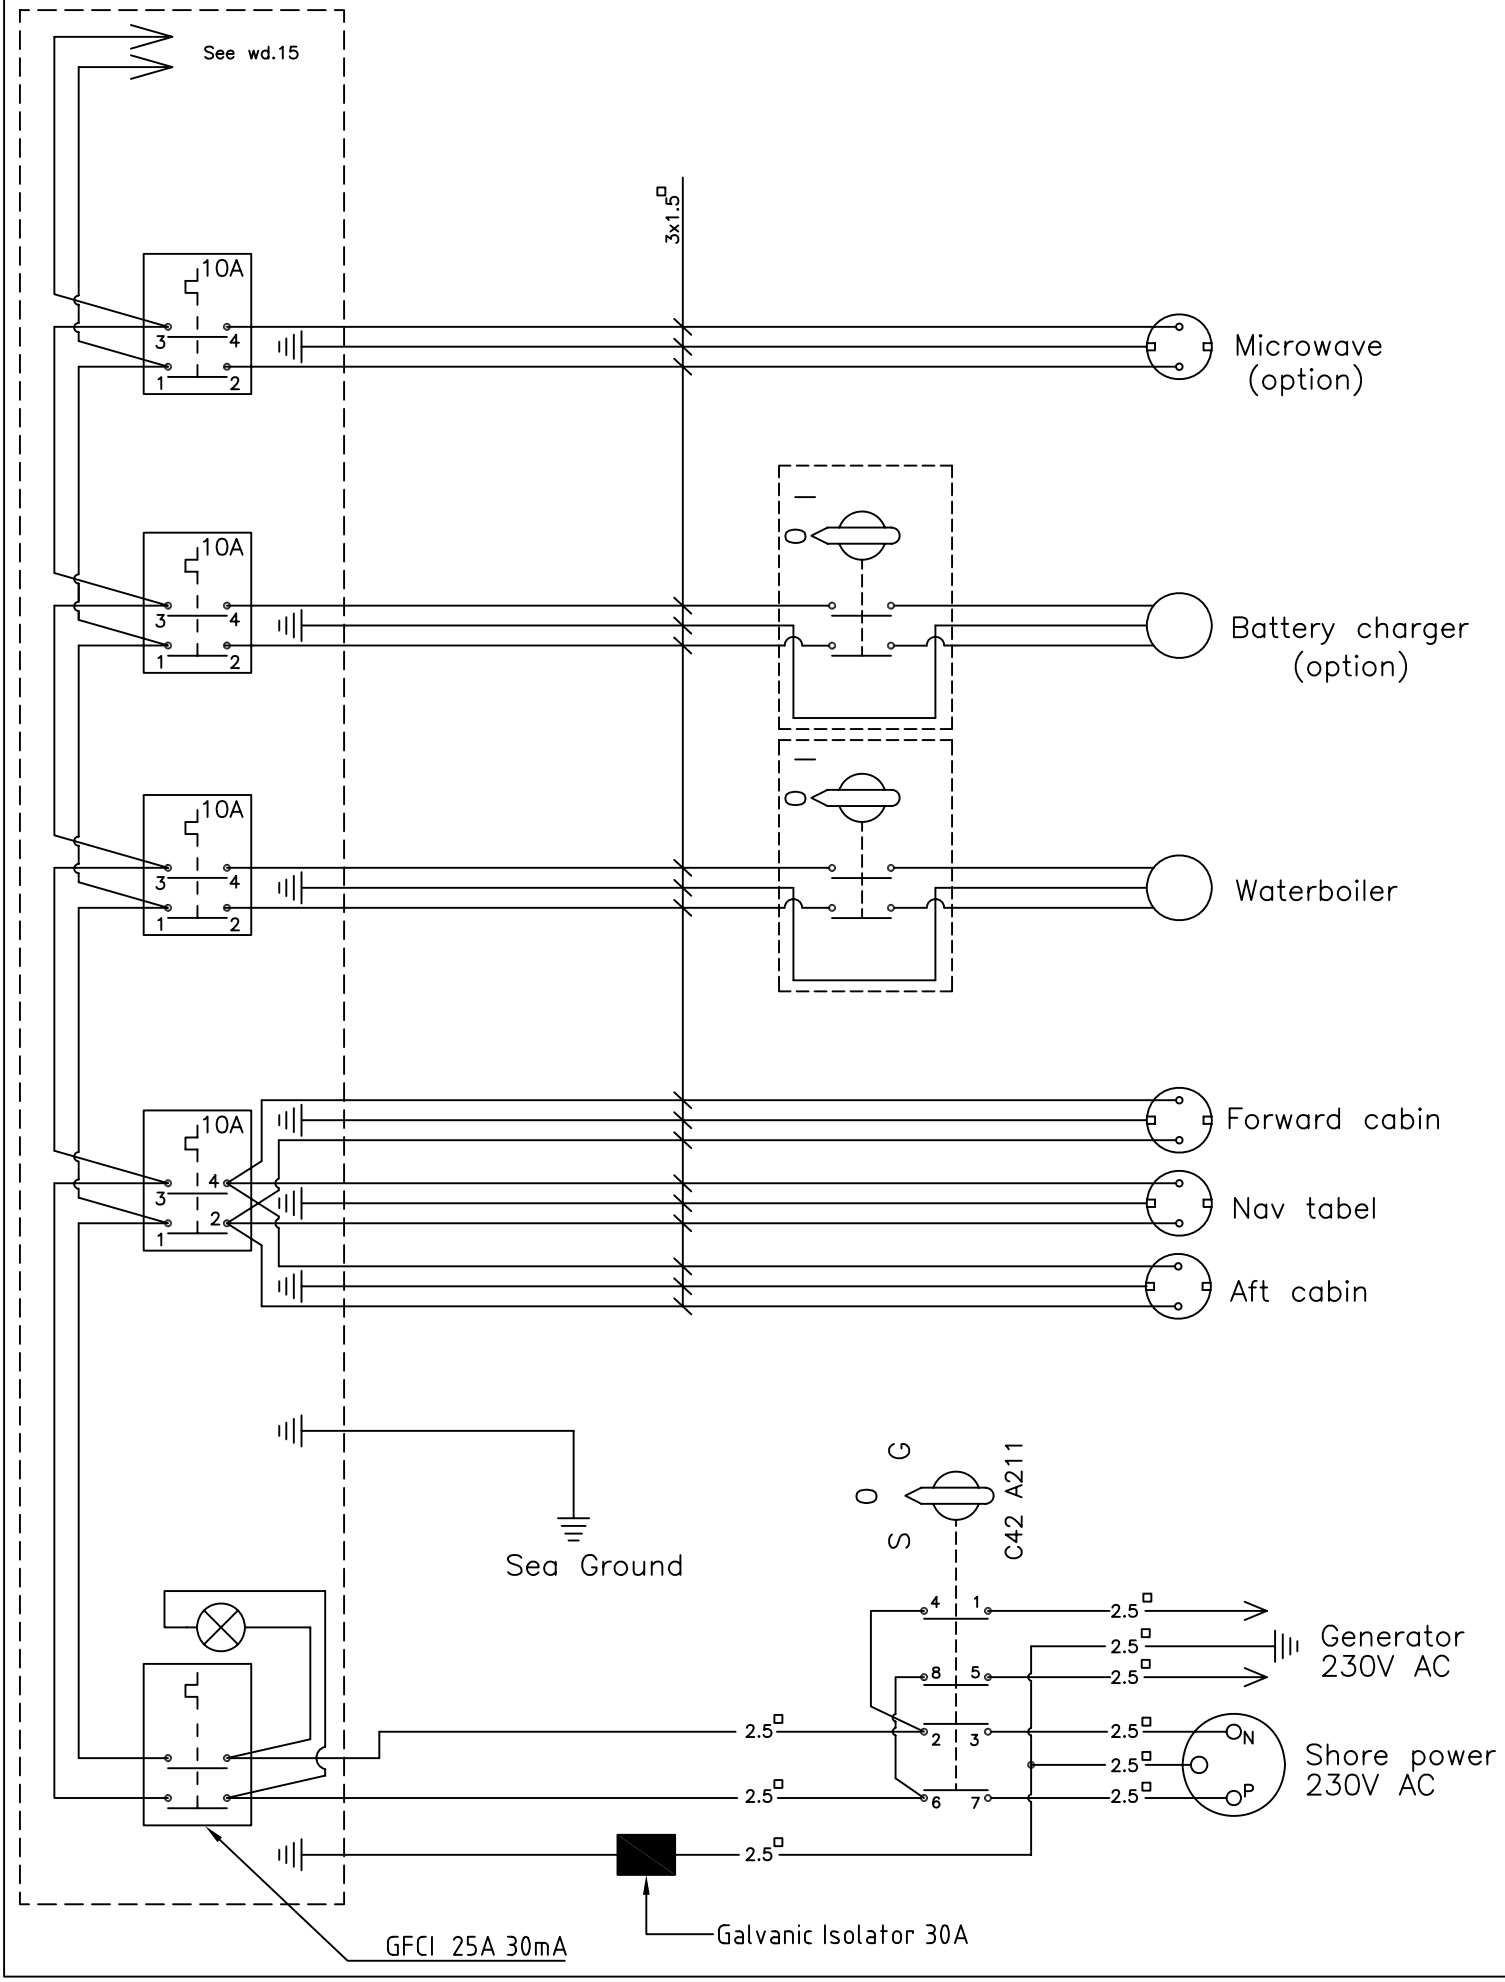

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

HR 37

230V System
With inverter
(Option)

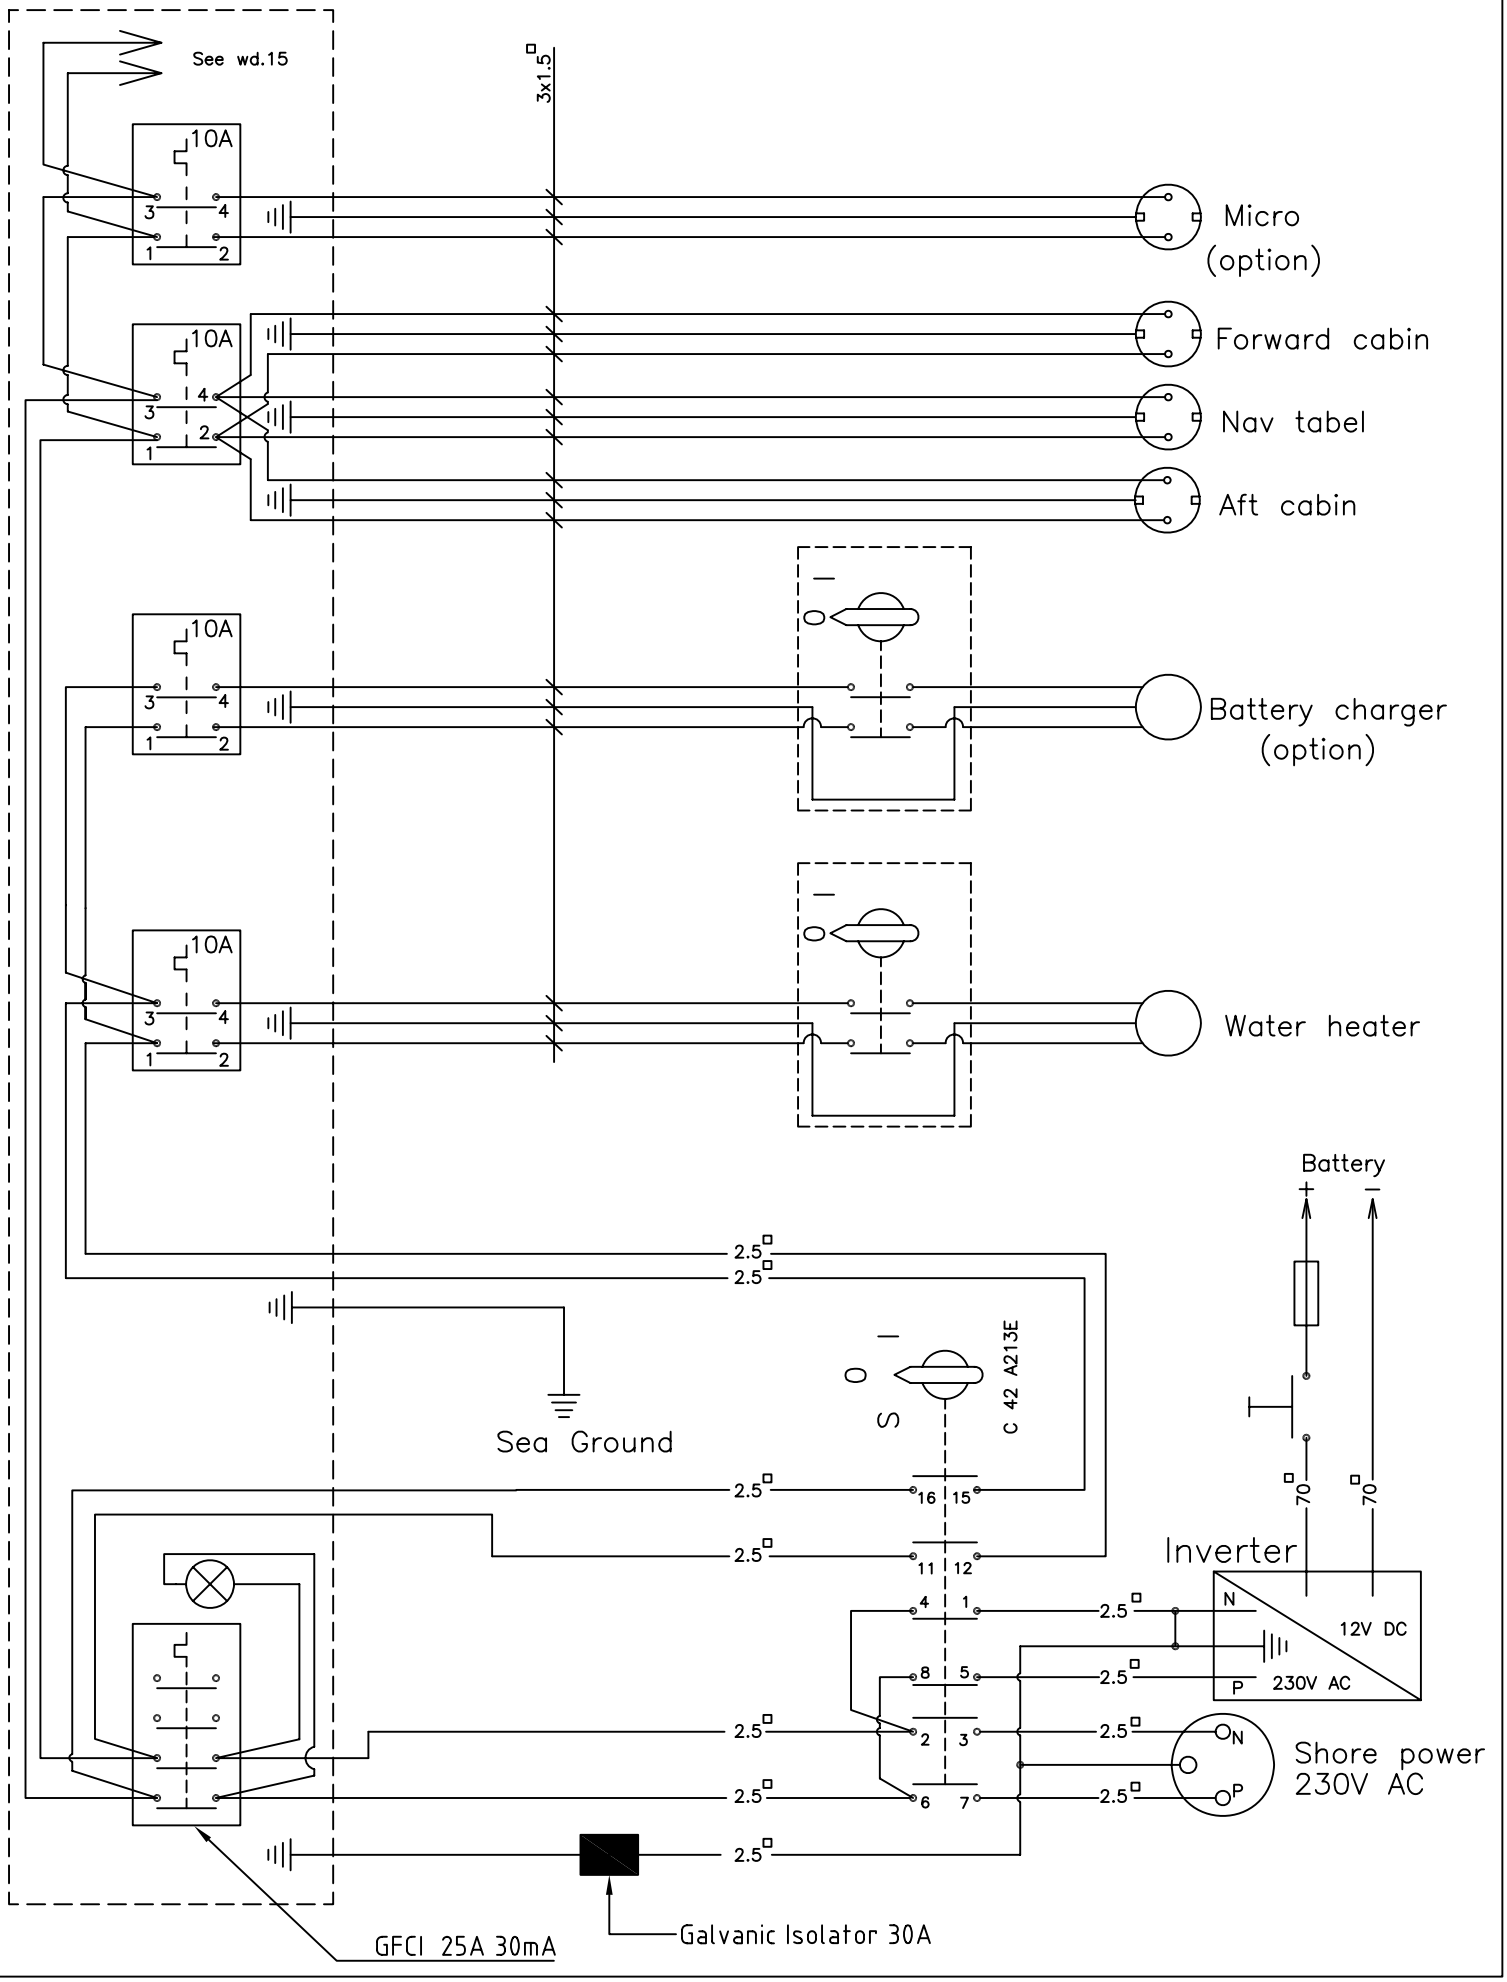

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

HR 37

230V System

With inverter and generator (Option)

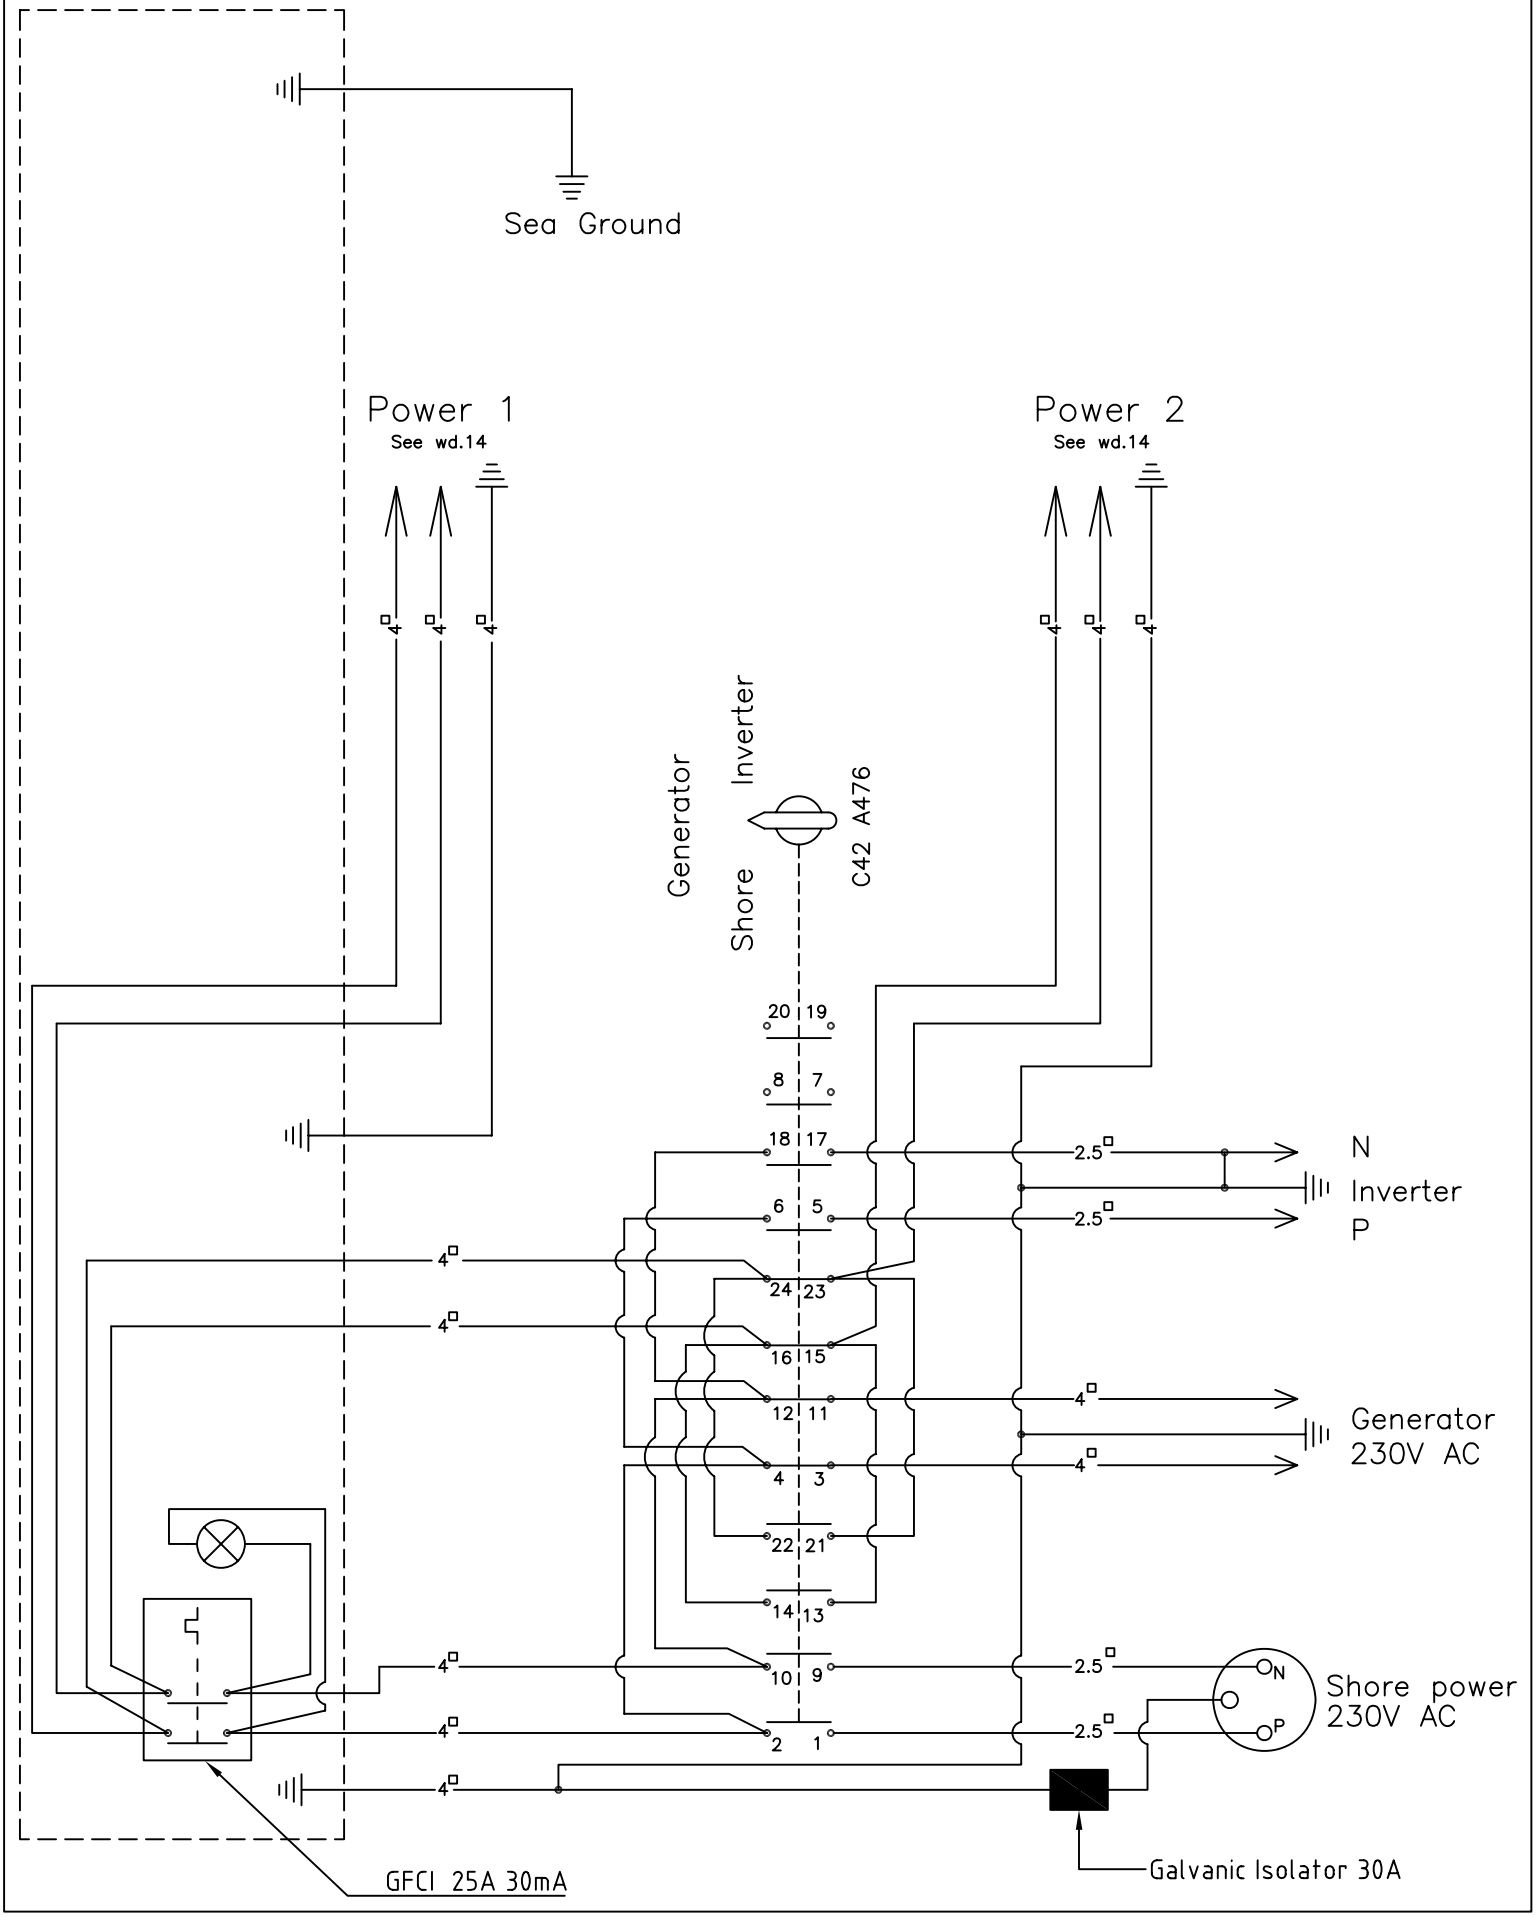

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

HR 37

230V System
With inverter and generator
(Option)

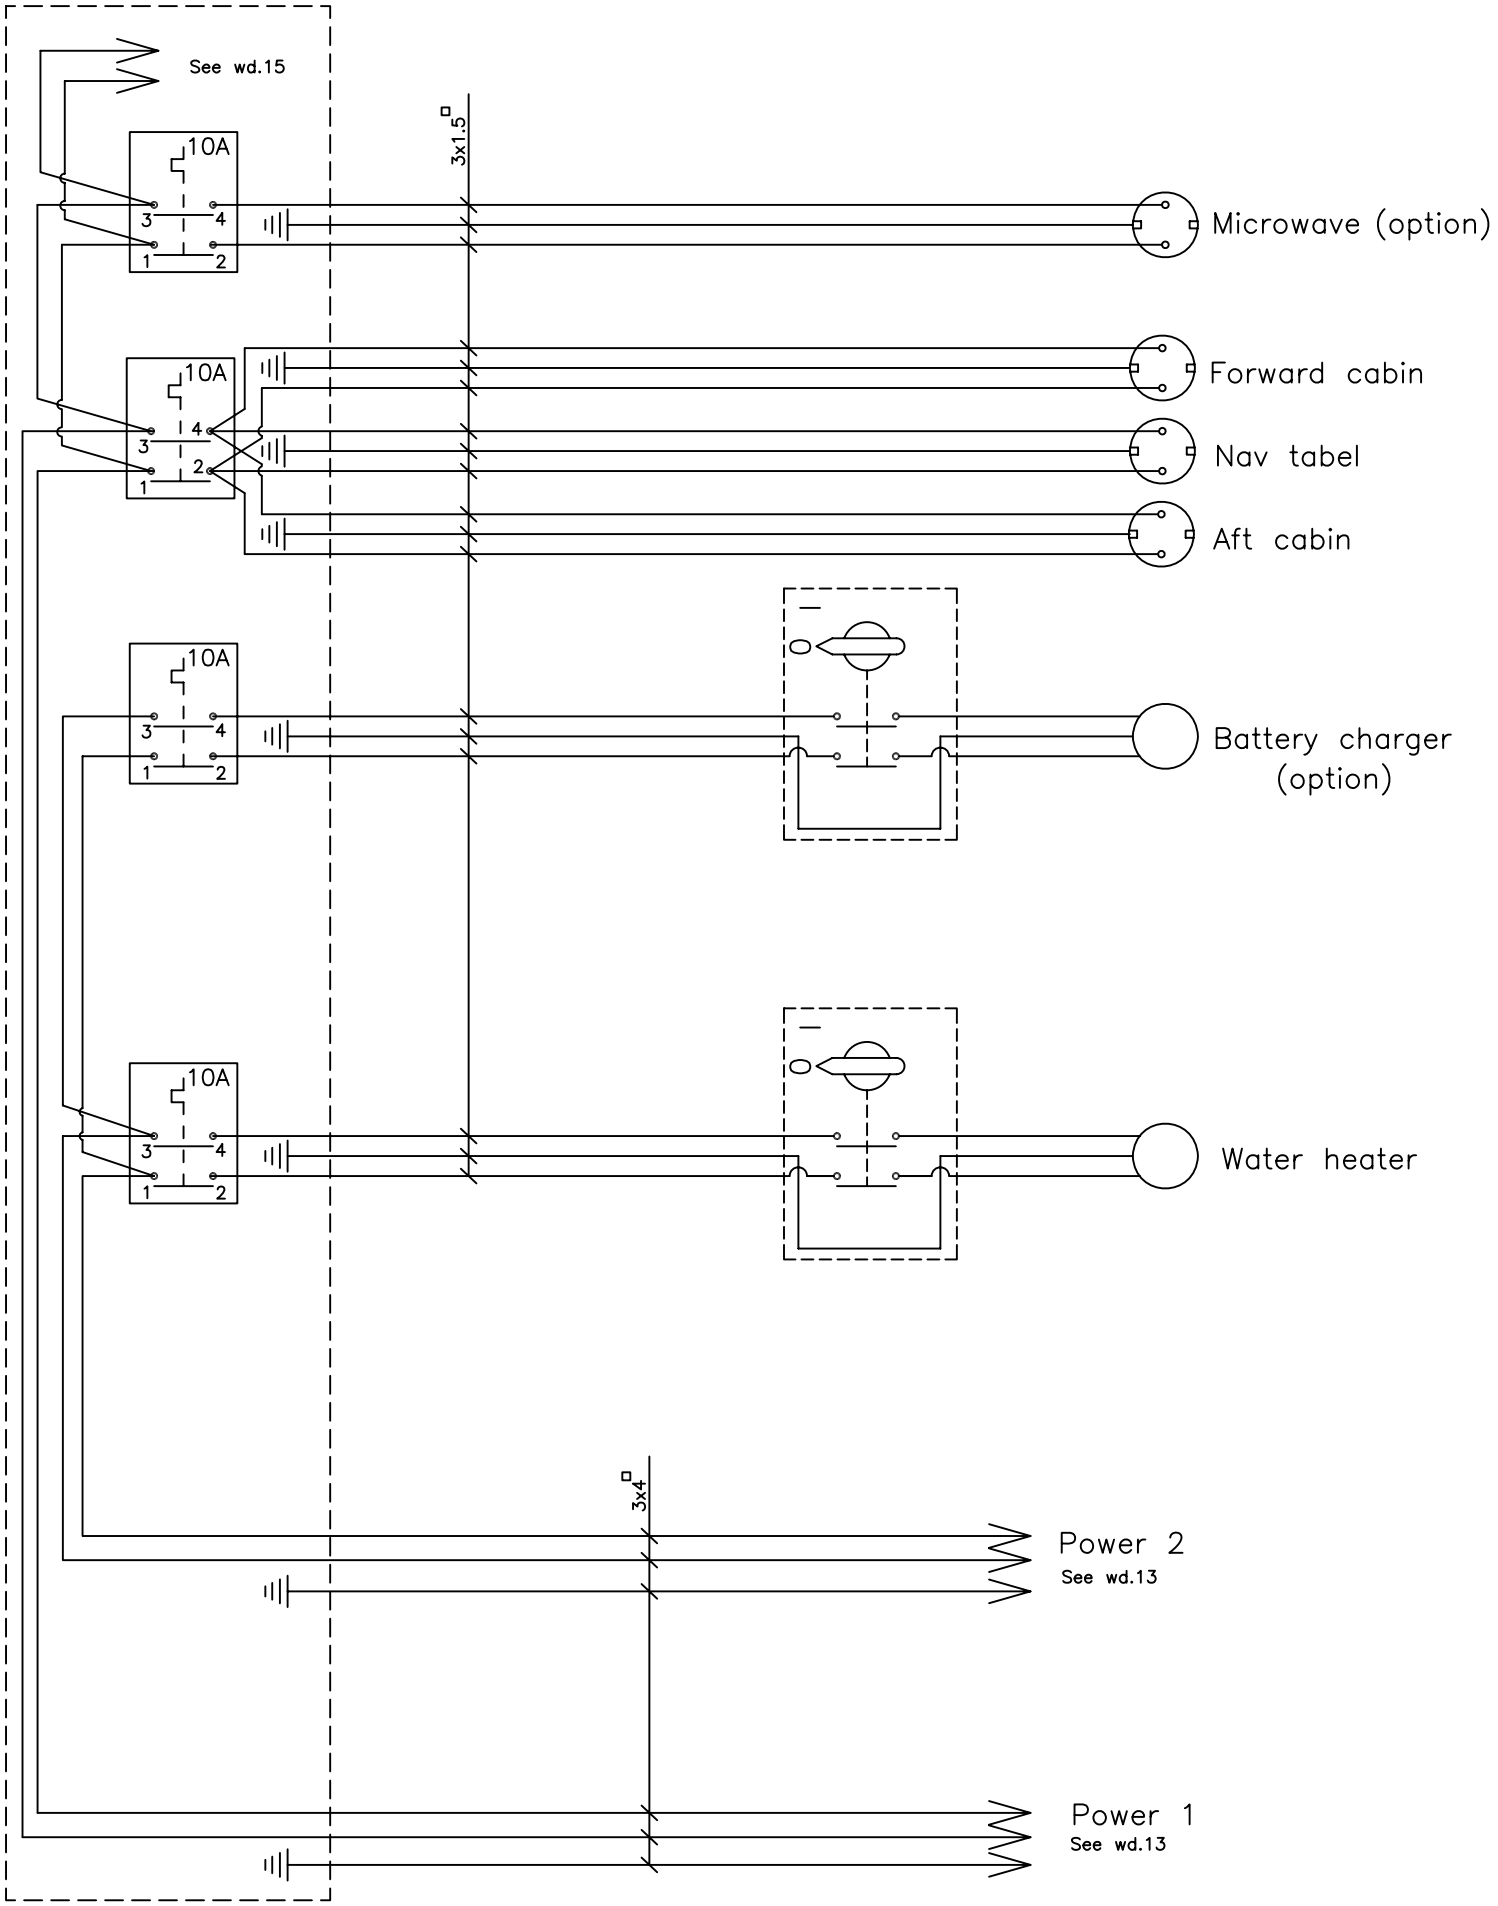

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram
HR 37

230V System

(Option)

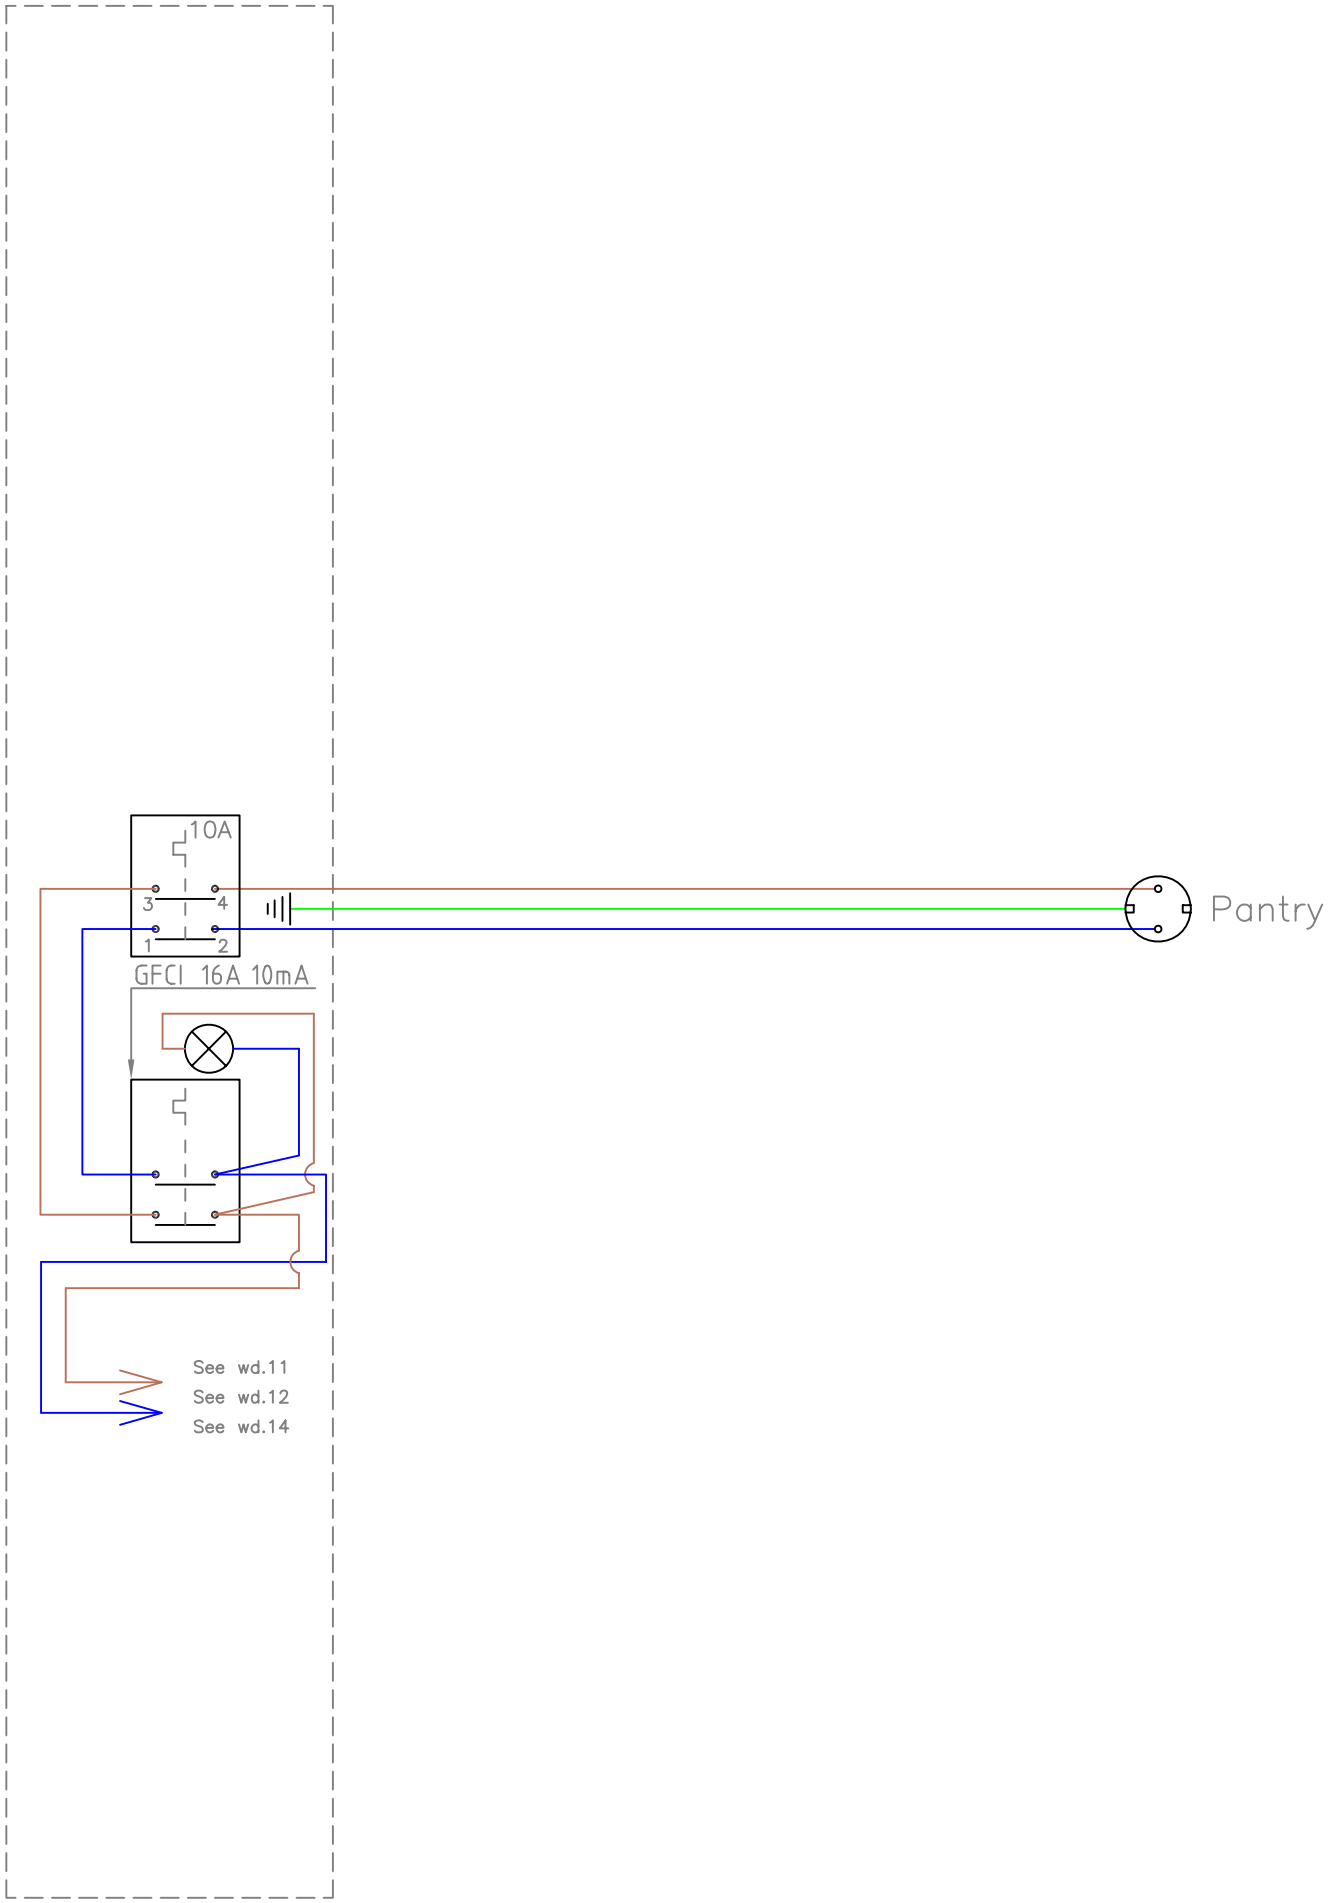

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

HR 37

OPTION: RADAR DISPLAY POWER SUPPLY
(WHEN EQUIPPED WITH BOW THRUSTER)

MASCOT TYPE 8660 12/24 CONVERTER

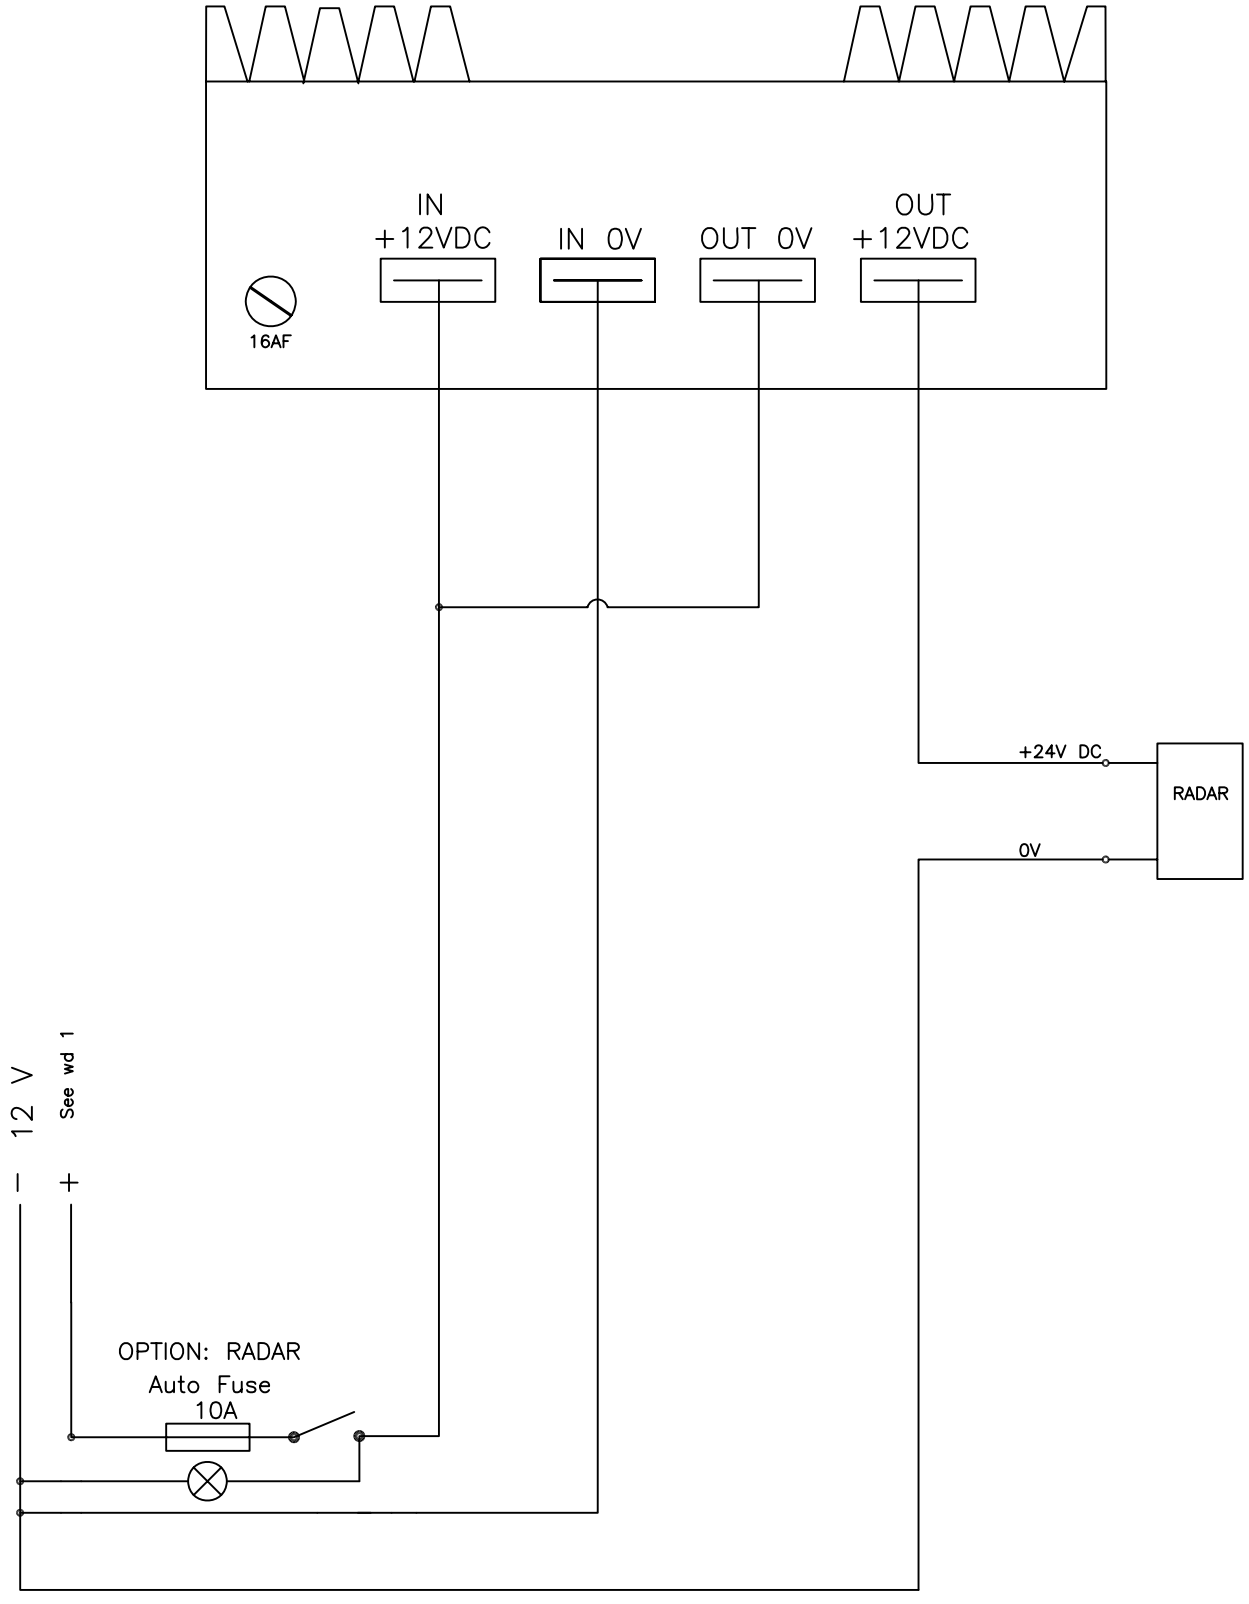

Hallberg-Rassy®
Hallberg-Rassyvägen 1-SE-474 31 Ellös-Sweden
PHONE: +46-304-548 00 FAX: +46-304-513 31

Wiring diagram

OPTION: RADAR DISPLAY POWER SUPPLY
(WHEN EQUIPPED WITH BOW THRUSTER)
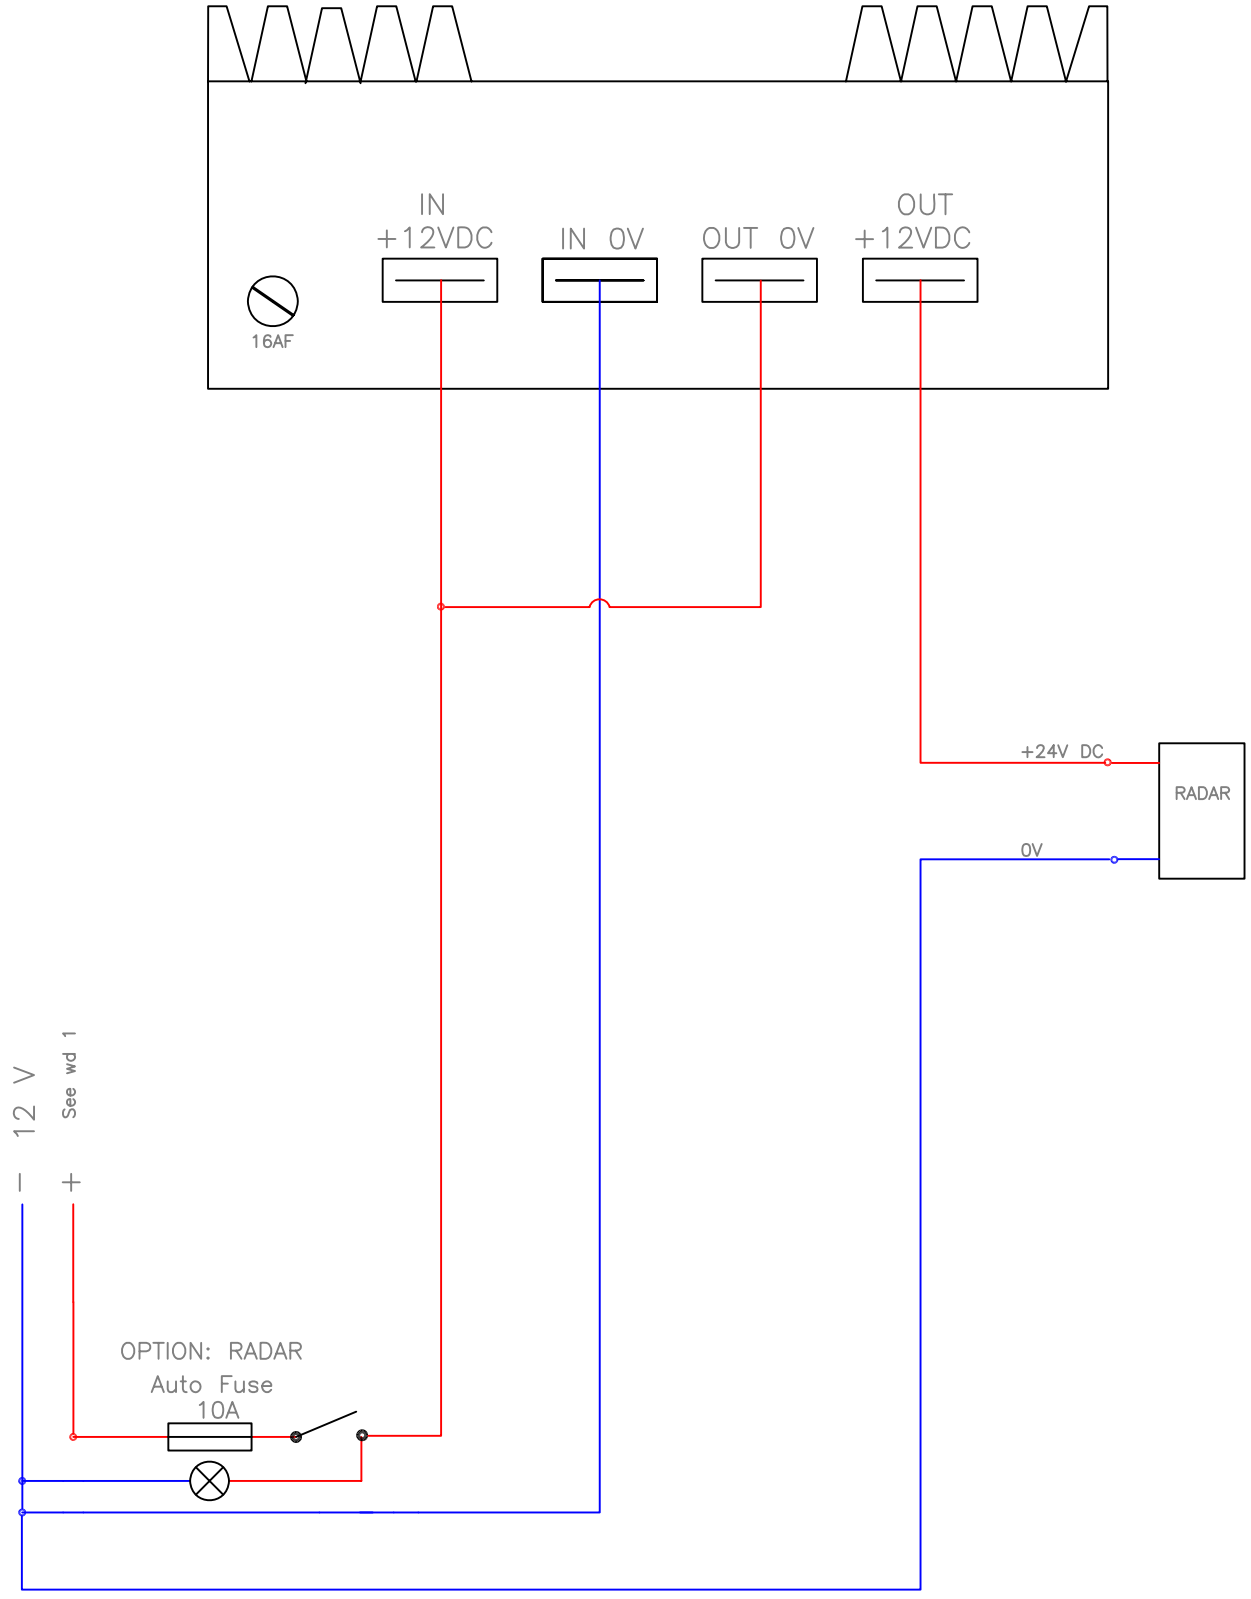
MASCOT TYPE 8660 12/24 CONVERTER